

Removal

1 Pull window molding center top (1) as shown in Fig. 1 from clips (2) (Fig. 2).

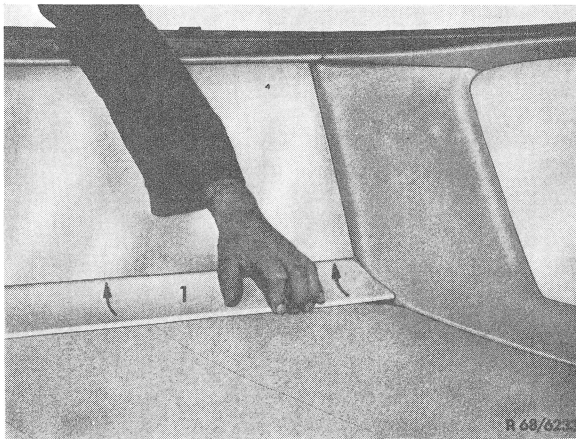


Fig. 1

1 Window molding center top

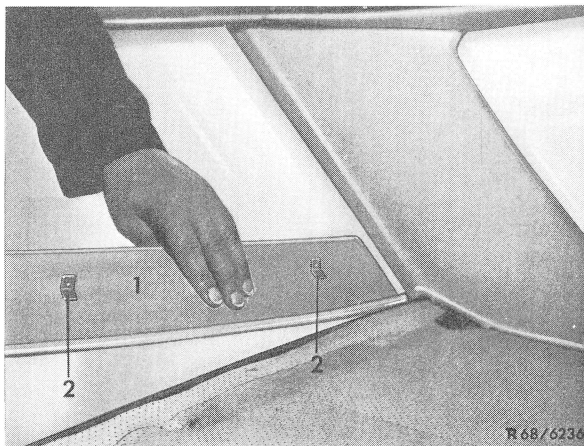


Fig. 2

1 Window molding center top
2 Clip

2 Remove sealing strip (3) (Fig. 3).

3 Remove window molding (4) on window flange.

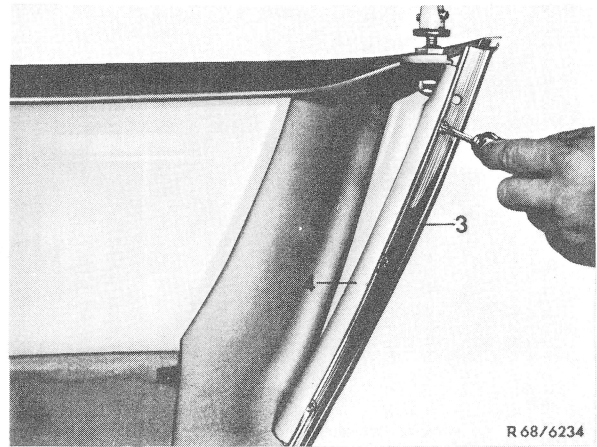


Fig. 3

3 Sealing strip
4 Window molding on window flange

4 Remove handle.

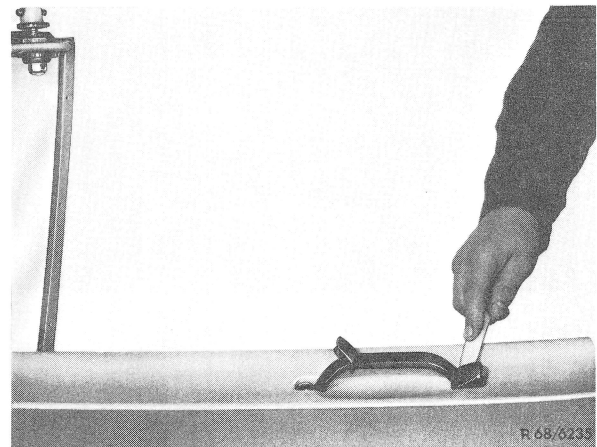


Fig. 4

5 Remove screw (5) on lateral window molding (6) (Fig. 5).

6 Pull window molding (6) out of clip (7) in direction of arrow (Fig. 6 and 7).

68.1 Window Molding on Coupe Top Laterally and on Center Top

Installation

7 For installation proceed vice versa.

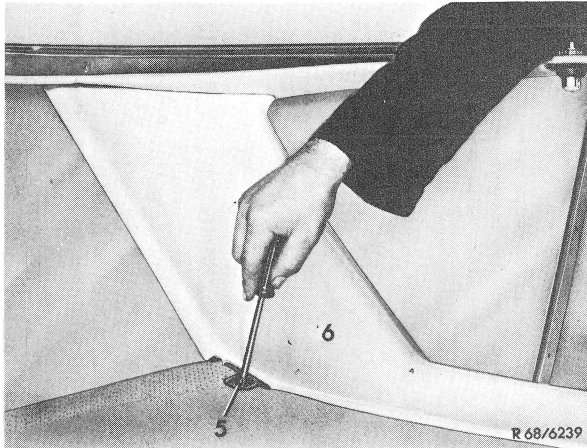


Fig. 5

- 5 Screw on window molding
- 6 Lateral window molding

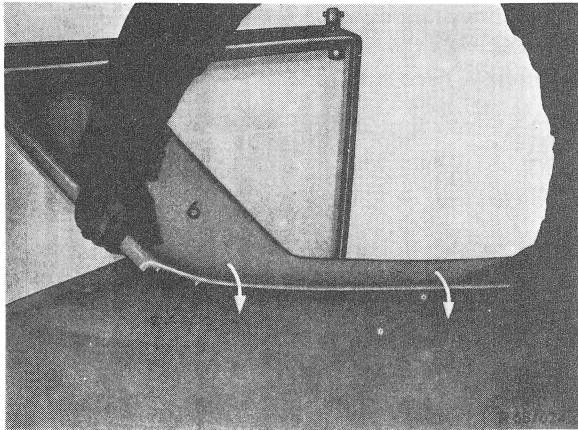


Fig. 6

- 6 Lateral window molding

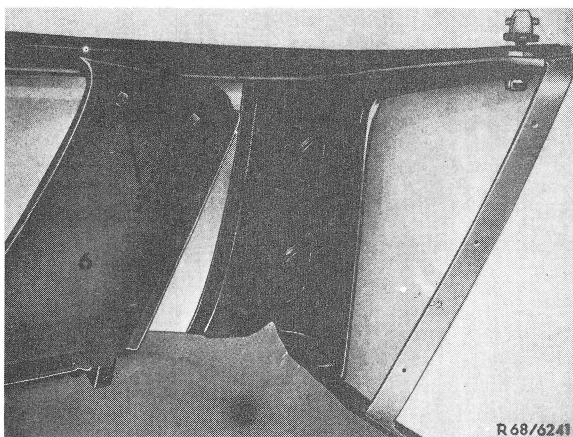


Fig. 7

- 6 Lateral window molding
- 7 Clips