

Removal

1 Push lower trimstrip (1) outwards by means of plastic wedge (2) starting at center (Fig. 1).

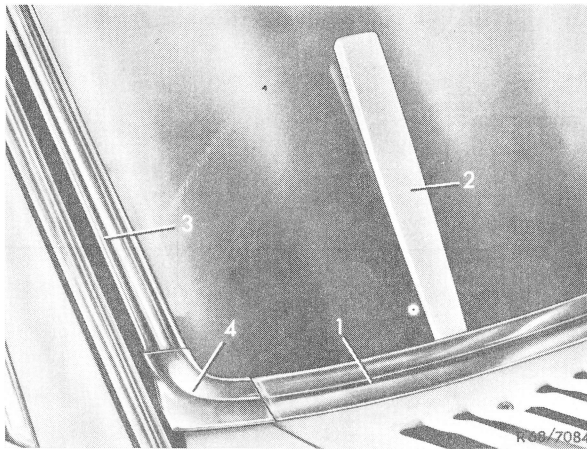


Figure 1

- | | |
|-------------------|---------------------|
| 1 Lower trimstrip | 3 Lateral trimstrip |
| 2 Plastic wedge | 4 Corner piece |

2 Push trimstrip out of clips starting laterally (3) from below.

3 Pull lateral trimstrip (3) out of connecting piece (5) in downward direction (Fig. 2).

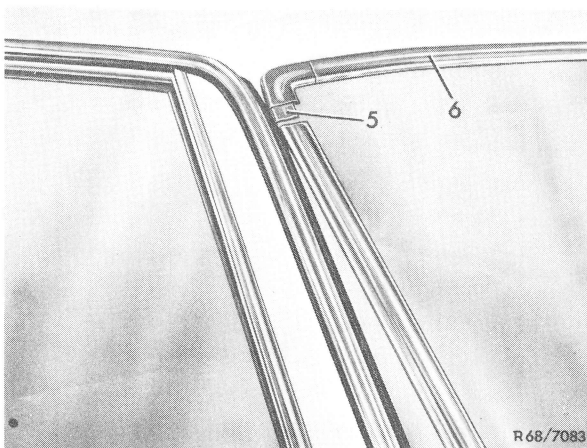


Figure 2

- | |
|--------------------|
| 5 Connecting piece |
| 6 Trimstrip top |

4 Remove trimstrip top (6) as described under item 1.

Installation

5 To facilitate assembly, attach rubber lip (7) to weather strip (8) by means of adhesive tape (9) (Fig. 3).

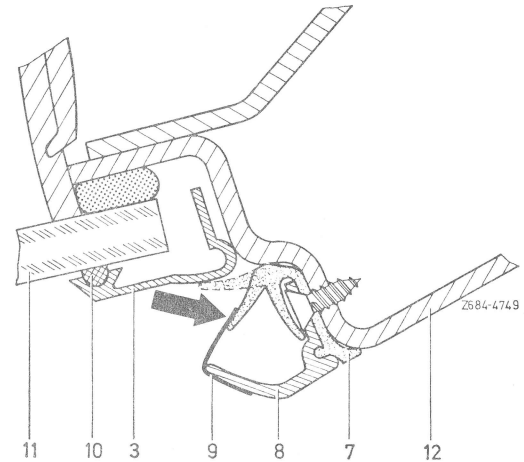


Figure 3

- | | |
|-----------------|----------------------|
| 3 Trimstrip | 10 Sealing strip |
| 7 Rubber lip | 11 Windshield |
| 8 Weather strip | 12 Front wall pillar |
| 9 Adhesive tape | |

6 For further installation proceed vice versa to installation. Make sure that the sealing strip (10) on contact surface of windshield is properly pulled into trimstrip.