

# 72.1 Removal and Installation of Window Crank

---

107

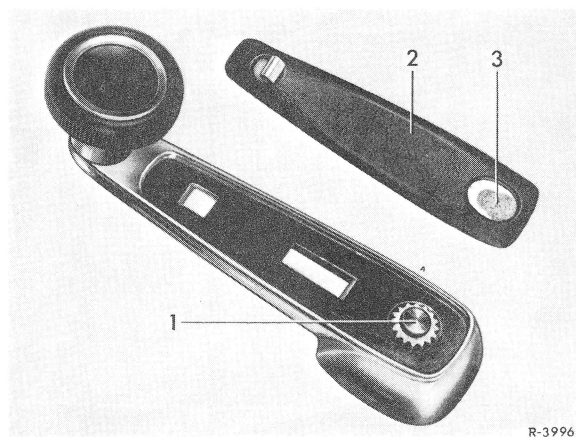


Fig. 1

- 1 Shaft of cranking unit
- 2 Padding
- 3 Recess in padding

---

## Removal

- 1 Raise padding (2) at knob end.
- 2 Pull padding toward knob and separate from recess (3).
- 3 Remove window crank from shaft (1) of crank unit including spacing washer and rosette.

---

## Installation

- 4 For installation proceed vice versa.