

Removal

- 1 Remove door lining (72.1–100).
- 2 Unscrew screw (1) on rear hook of door lining.
- 3 Remove arm rest with grip.

Installation

- 4 For installation proceed vice versa.

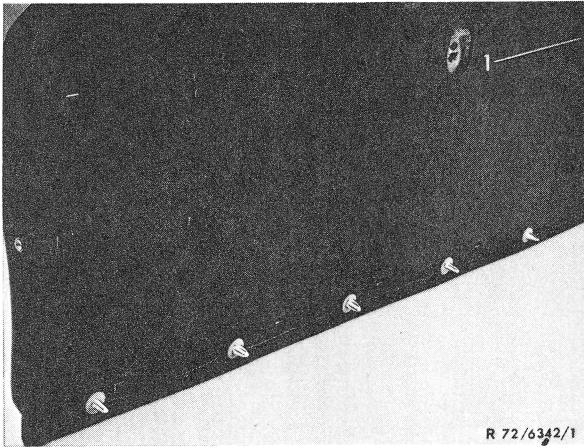


Fig. 1

- 1 Screw for armrest