

72.1 Removal and Installation of Outer Sealing Strip

107

Removal

- 1 Remove trimstrip on edge of outer door panel. (68.1—516).
- 2 Remove clips together with sealing strip from rabbet, as shown in Fig. 1.

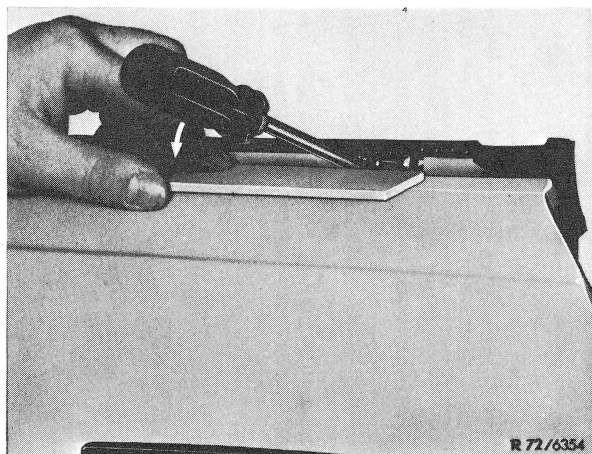


Fig. 1

Installation

- 3 For installation proceed vice versa.