

Removal

- 1 Remove screws (1) of light (2).
- 2 Pull out light slightly.
- 3 Pull plug (3) for trunk light from light (2).
- 4 Remove cable and plug from frame of trunk lid.
- 5 Place one rag each between the two ends on trunk lid and rear wall window as a protection against damage.
- 6 Mark position of lid in relation to hinge.
- 7 Remove screws on both trunk lid hinges.

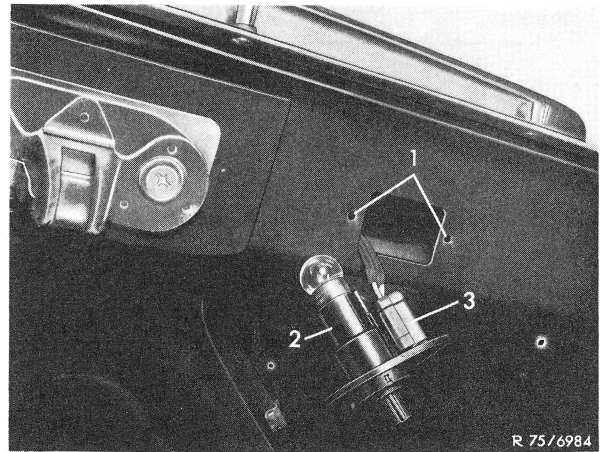


Figure 1

- 1 Screws for trunk light
- 2 Trunk light
- 3 Plug for trunk light

Installation

- 8 For installation proceed vice versa.