

Special Tool

Mounting lever

107 589 00 37 00

Removal

- 1 Remove fuel tank (47.1-020).
- 2 Open torsion bar holding bracket below in center.
- 3 Position mounting lever (2) above torsion bar spring left and tighten screw (4) (Fig. 1).

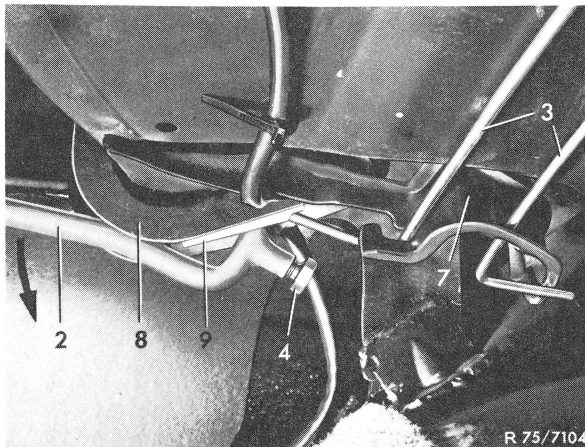


Figure 1

- | | |
|---------------------------------------|------------------------------------|
| 2 Mounting lever for trunk lid spring | 7 Mounting for torsion bar springs |
| 3 Torsion bar springs | 8 Hinge lever left |
| 4 Screw on mounting lever | 9 Slide piece |

- 4 Support trunk lid.

- 5 Turn mounting lever (2) downwards (refer to arrow) and lift torsion bar spring (3) with both hands out of mounting (7).

The slide piece (9) will then drop out of hinge lever (8).

Caution! Torsion bar spring is under heavy load.

- 6 Slowly turn mounting lever forward to slacken spring (Fig. 2).

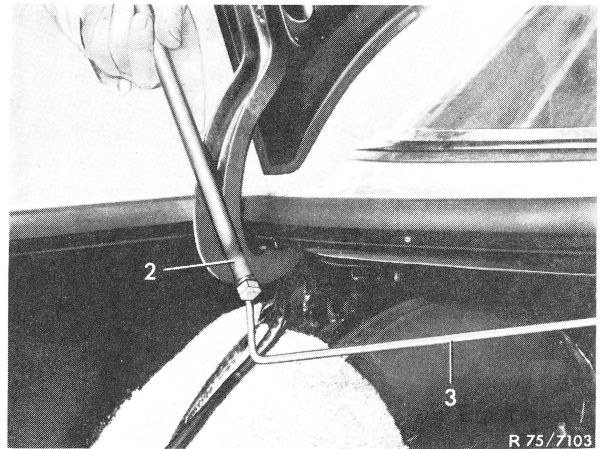


Figure 2

- | |
|----------------------|
| 2 Mounting lever |
| 3 Torsion bar spring |

- 7 Loosen mounting lever.
- 8 Remove torsion bar spring (3) right out of mounting.
- 9 Disconnect second torsion bar spring in the same manner.

Installation

- 10 For installation proceed vice versa.

For attachment to mounting, the torsion bar must be tensioned by approx. 1/4 turn. Upon attachment, turn torsion bar lightly downwards and insert slide piece.