

75.1 Removal and Installation of Lock for Top Well Lid

107

Removal

Lefthand End

- 1 Remove locking ring (1) from bolt (2) and disconnect push rod (3).
- 2 Remove screws (4) from lower half of lock (5).
- 3 Remove lower half of lock (5).

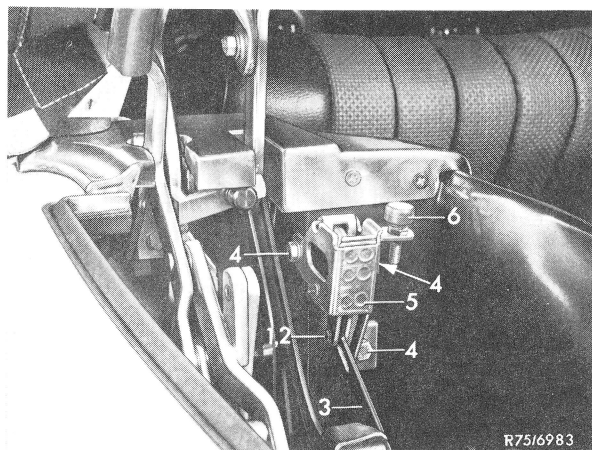


Figure 1

- | | |
|----------------|----------------------|
| 1 Locking ring | 4 Screws |
| 2 Bolt | 5 Lower half of lock |
| 3 Push rod | 6 Stop screw |

Righthand End

- 4 Removal similar to lefthand end, but instead of push rod disconnect top well lid cable control.

Installation

- 5 For installation proceed vice versa.

Adjust stop screw (6) on lower half of lock in such a manner that lid closes under moderate pressure.