
Note

In the event of repairs, install new guide bearing with pertinent pull rod (refer to Fig. 2b in Job No. 75.1–240).

For Conversion Proceed as Follows

- 1 Remove guide bearing with pull rod (75.1–240).
- 2 Refinish two oblong holes for receiving holder for pull rod according to Fig. 1 in floor side member.

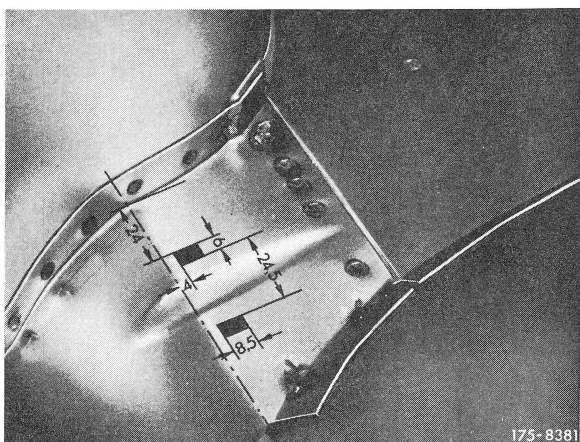


Fig. 1

Layout of oblong holes in floor side member.

- 3 Push holder from the rear over pull rod and push into oblong holes.

- 4 Install guide bearing with pull rod (75.1–240).

Spare Parts

Guide bearing	Part No. 107 750 04 41
Pull rod	Part No. 107 758 08 23
Holder	Part No. 107 758 00 14

Responsible for delivery: ET Sindelfingen