

Removal

- 1 Remove top from top well.
- 2 Remove protective padding from crank lever (1) (72.1–110).
- 3 Remove crank lever (1) and actuating lever (2).

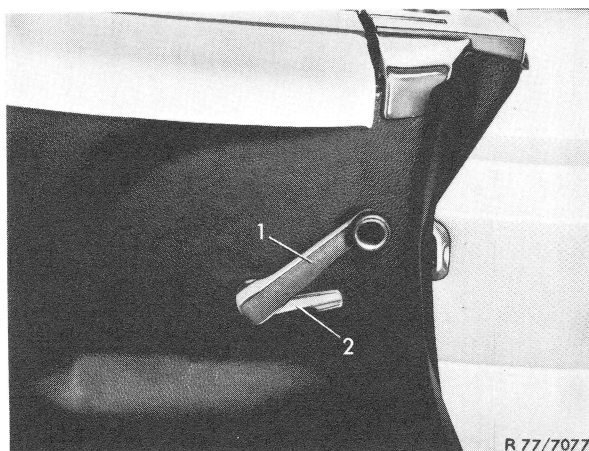


Figure 1

- 1 Crank lever 2 Actuating lever

- 4 Remove lower half of lock left and right (75.1–220).
- 5 Identify location of center lock (6) in relation to top well.

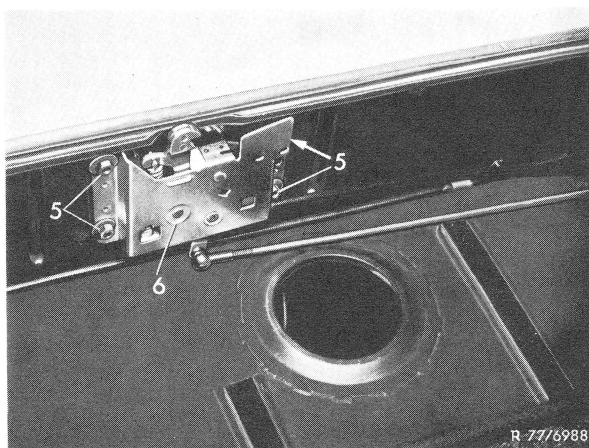


Figure 2

- 5 Fastening screws 6 Lock

- 6 Remove screws (5) and lock (6) (Fig. 2).

- 7 Remove fastening screws (7) on guide bearing (8) and remove guide bearing from top well.

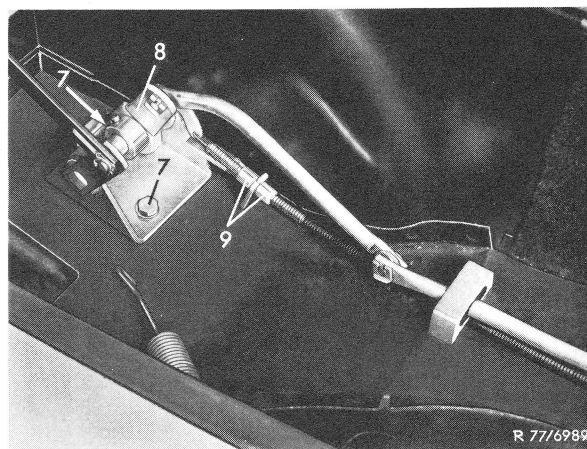


Figure 3

- 7 Fastening screws
8 Guide bearing
9 Knurled nuts for longitudinal adjustment of bowden wire

- 8 Remove lock washer (10) on guide lever (11).

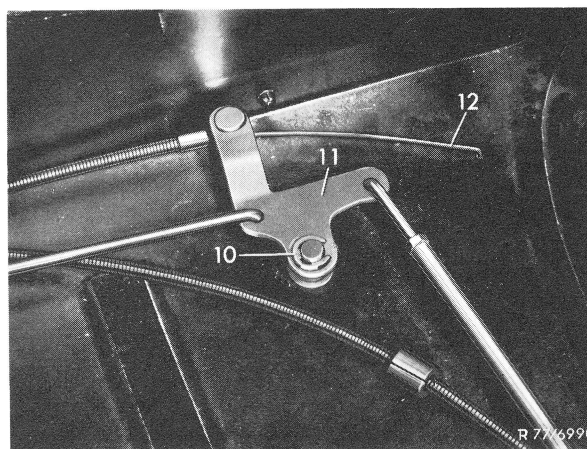


Figure 4

- 10 Lock washer 12 Top well lid cable control
11 Guide lever

- 9 Remove guide lever (11) and disconnect top well lid cable control (12).

77.1

Removal and Installation of Top Lock in Top Well

Installation

10 For installation proceed vice versa.

Secure knurled nut (9) for longitudinal adjustment of bowden wire with Loctite TL 270.

11 Adjust top well lock in its height in such a manner that the draw hook is under tension when the top is closed.

Check: Top should be seated free of play in draw hook when raised.

12 Install actuating lever (2) in such a manner that the handle plate faces the driving direction (Fig. 1).