

Heating and Venting

Control of Heating System	Job No. 83.1—020
Removal and Installation of Heater Box with Heat Exchanger	100
Removal and Installation of Heat Exchanger	110
Removal and Installation of Heater Blower	120
Removal and Installation of Ornamental Grille on Air Inlet	140

Air-Conditioning

General Description and Operation	500
Electrical Function of Air-Conditioning System and Supplementary Fan	505
Function Test of Air-Conditioning System	510
Removal and Installation of Refrigerant Compressor	515
Removal and Installation of Condenser	520
Removal and Installation of Receiver Dehydrator	525
Removal and Installation of Expansion Valve	530
Removal and Installation of Evaporator	535
Adjustment or Removal and Installation of Temperature Vacuum Switch	540
Removal and Installation of Vacuum Elements or Ambient Air Flap	545
Removal and Installation of Supplementary Fan	550
Coolant Circuit	83.0—800
Safety Measures	810
Repair Instructions for Air-Conditioning System	820
Leak Check and Evacuation	830
Refilling or Replenishing Air-Conditioning System	840
Draining of Air-Conditioning System	850
Checking Oil Level in Refrigerant Compressor (Frigidaire Refrigerant Compressor)	870
Removal and Installation of Electromagnetic Clutch and Shaft Seal (Frigidaire Refrigerant Compressor)	885
Reconditioning of Frigidaire Refrigerant Compressor	895
Checking Frigidaire Refrigerant Compressor for External Leaks	900
Replacement of Hose Lines	910
Tightening Torques (in mkp) for Hose Fittings	915

Illustrated Tables

Air-Conditioning System	83.1—990/1
Vacuum Control	990/2

