

Engine Hood

- 1 Loosen both hood supports from engine hood.
- 2 Unscrew screws on hinge lever.
- 3 Remove hood.

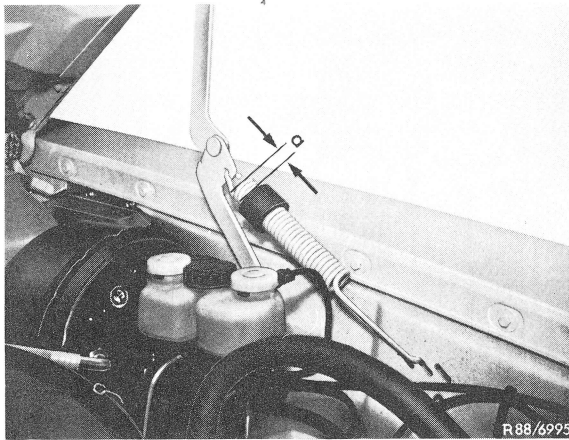


Fig. 1

a = 40 mm

During installation, make sure that rubber roller is at a distance of a = 40 mm from rear end of draw spring.

Hinge Lever

- 1 Remove engine hood.
- 2 Remove ornamental grille for air inlet (83.1–140).
- 3 Loosen screws on hinge lever mounting.
- 4 Remove hinge lever with mounting and screw.

Caution! Adjust engine hood in such a manner that distance and transition to front fenders is the same on both sides and that engine hood closes perfectly. Lubricate safety hooks and check for easy operation.

Reach with hand through Mercedes Star on radiator grille and check whether safety hook on engaged and locked engine hood rests against stiffening panel and secures engine hood against bursting open.