

- 1 Check cutout for threaded plate on hinge (1) of driver's door at front wall pillar and seal, if required (Fig. 1).

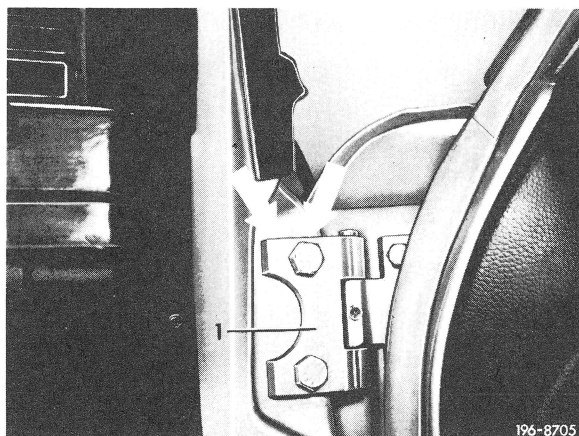


Fig. 1
1 Hinge

- 2 Adjust door or window spacing to 23-25 mm. Check sealing frame and seal or renew as required (refer to 72.3-220).

- 3 Check driver's or rear door foil and seal or renew, as required (refer to 72.3-100).

Note: With foil removed, check seal of window opener. If missing, insert seal Part No. 116 725 03 98 (driver's door) or 116 735 00 98 (rear door).

- 4 Check socket at window guide rail at bottom of front door and seal or renew, as required (refer to 72.3-200).

- 5 Check base of outside mirror and seal, if required. Check rubber shim and renew, if required.

- 6 Check trimstrip on window frame of rear door and seal by inserting sealing cord or remove (refer to 72.3-300).

- 7 Check cutout for rear door hinge on center pillar and seal, if required.