

- 1 Seal windshield pane, if required.
- 2 Check socket for hood cable control and seal or replace as required.
- 3 Check seam (1) in hinge range of engine hood and seal, if required (Fig. 1).

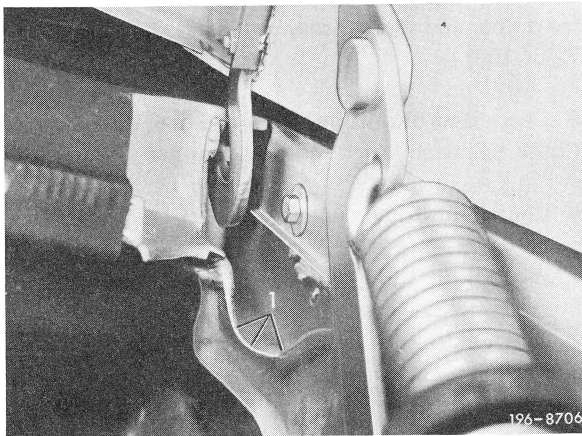


Fig. 1

1 Seam on engine hood hinge

- 4 Check bulkhead in header tank and seal, if required. Remove ornamental grille for air inlet for this purpose (refer to 83.3-140).

- 5 Check sockets for cables and lines or blind sockets and seal or replace as required.

- 6 Check outlet holes (3) on front wall and front wall stiffening and clean (Fig. 2).

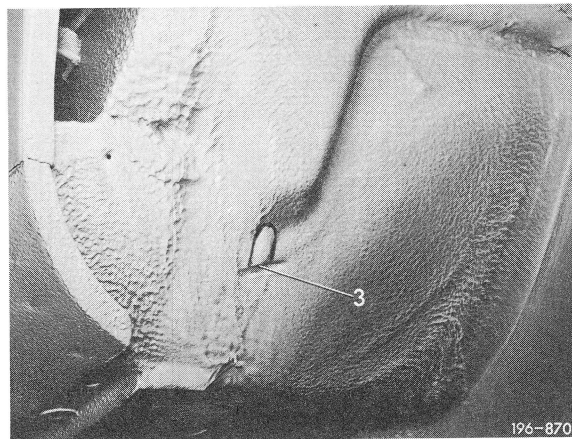


Fig. 2

3 Drain holes

- 7 Check PVC seam seals and touch-up, if required.