

Without Starting Torque Compensation

**Rear Axle**

Removal and Installation of Complete Rear Axle Model 107, 116	35.1- 020
Removal and Installation of Front Rubber Mounting of Rear Axle Suspension	040
Removal and Installation of Rear Rubber Mounting of Rear Axle Suspension	050
Removal, Inspection and Installation of Rear Axle Carrier Model 107.02, 114, 115	060

**Rear Axle Center Housing**

Removal and Installation of Rear Axle Center Housing with Rear Axle Shafts Model 107, 116	120
Replacement of Sealing Ring on Drive Pinion	140
Replacement of Sealing Rings on Bearing Caps of Rear Axle Housing	160

**Rear Axle Shaft**

Removal and Installation of Rear Axle Shaft (Diagonal Swing Axle Model 114, 115 and 107, 116)	220
Change of Rubber Sleeves of Rear Axle Shaft	230

**Semi-trailing Arms** (Diagonal Swing Axle Model 107, 114, 115, 116)

Removal and Installation of Semi-trailing Arm	310
Inspection of Semi-trailing Arm	340
Removal and Installation of Rear Axle Shaft Flange, Adjustment of Wheel Bearings	370

**Gear Assembly and Differential**

Installation Survey Rear Axle Center Housing	R 500
Removal of Differential with Ring Gear	R 520
Disassembly and Assembly of Differential	R 530
Disassembly and Assembly of Differential with Positive Traction (Restricted Slip)	R 535
Removal and Inspection of Drive Pinion	R 540
Installation and Adjustment of Drive Pinion	R 550
Installation of Differential with Ring Gear, Adjustment of Backlash	R 560

**Illustrated Table Rear Axle**

990

