

	Job No.
Brake System	
Bleeding the Brake System or Renewing the Brake Fluid	42.0-010
Checking Brake Lines and Brake Hoses	42.0-012
Checking the Braking System for Leaks	42.0-015
Inspection of Check Valve	42.0-023
Checking Warning Device in Compensating Tank	42.0-035
Inspection or Adjustment of Mechanical Brake Light Switch	42.0-040
Brake Caliper	
Checking Piston Release Clearance in Caliper	42.0-140
Replacement of Piston Seal on Front Axle Caliper	42.0-150
Replacement of Piston Seal on Rear Axle Caliper	42.0-155
Replacement of Brake Shoes	42.0-160
Removal and Installation of Front Brake Caliper	42.1-100
Removal and Installation of Rear Brake Caliper	42.1-120
Brake Disc	
Cleaning of Brake Disc	42.0-260
Removal and Installation of Brake Disc on Front Axle	42.1-220
Removal and Installation of Brake Disc on Rear Axle	42.1-228
Tandem-Master Cylinder and Brake Unit	
Design and Operation of Tandem-Master Cylinder	42.0-300
Disassembly, Inspection, Assembly of Tandem-Master Cylinder	42.0-315
Stepped Tandem Master Cylinder	42.0-315/9
Checking the Brake Unit	42.0-325
Removal and Installation of Tandem-Master Cylinder	42.1-310
Removal and Installation of Brake Unit	42.1-350
Parking Brake	
Renewing Stop Rubber in Pedal Assembly of Parking Brake	42.0-515
Readjustment or Adjustment of Brake Shoes of Parking Brake	42.0-540
Removal and Installation of Pedal Assembly of Parking Brake	42.1-510
Removal and Installation of Front Brake Cable Control	42.1-520
Removal and Installation of Rear Brake Cable Control	42.1-525
Removal and Installation of Brake Shoes of Parking Brake	42.1-530
Illustrated Table	42.1-590

