

## Removal

- 1 Remove exhaust system (49.1–100).
- 2 Disconnect restoring spring on holder (2) (Fig. 1).

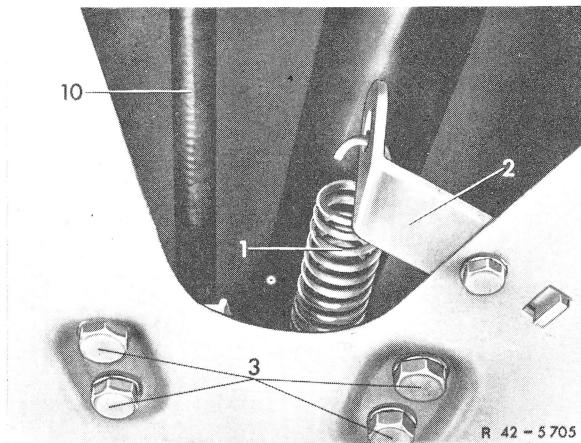


Fig. 1

1 Restoring spring	3 Hex. bolt
2 Holder	10 Brake cable control

- 3 Unscrew adjusting screw (3) on adjusting bracket (1) (Fig. 2).

- 4 Turn steering completely toward the left and unscrew hex. nut (20) in lefthand wheel house (Fig. 3).

- 5 Remove windshield wiper motor (82.1–610).

- 6 Unscrew hex. nut (21) on front end (Fig. 3).

- 7 Unscrew cover underneath instrument panel in legroom (3) and pull downwards. Remove legroom light (4), remove plug and pull cable out of cover (Fig. 4 and 5).

- 8 Unscrew actuating button (9) for manual release, then remove stop buffer (8) (Fig. 3).

- 9 Disconnect brake cable control (17) from pulling plate of parking brake. Remove spring clamp (19) and take-off brake cable control (Fig. 3 and 6).

- 10 Remove cable assembly from cable belt.

- 11 Loosen plug connection on switch (2) for parking brake warning light (Fig. 6).

- 12 Unscrew hex. bolt (13) from cross beam (12) and remove complete parking brake with connecting piece (22) (Fig. 3).

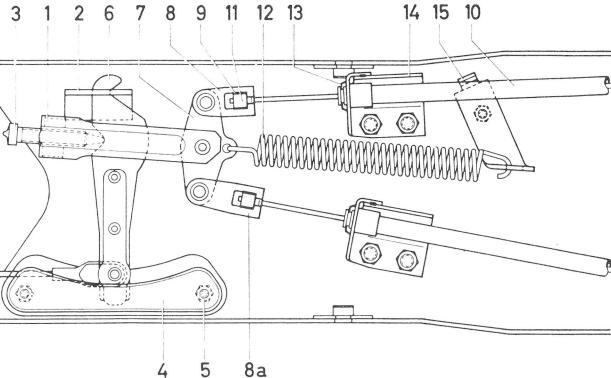


Fig. 2

1 Adjusting bracket	7 Compensating lever	12 Draw spring	15 Holder for draw spring
2 Bearing on chassis floor	8 Cable control plate	13 Spring clamp	16 Rubber sleeve
3 Adjusting screw	8a Cable control plate	14 Holder for rear brake	17 Spring clamp
4 Guide for intermediate lever	9 Hose member	cable control	18 Front brake cable control
5 Hex. bolt	10 Rear brake cable control		
6 Intermediate lever	11 Adapter		



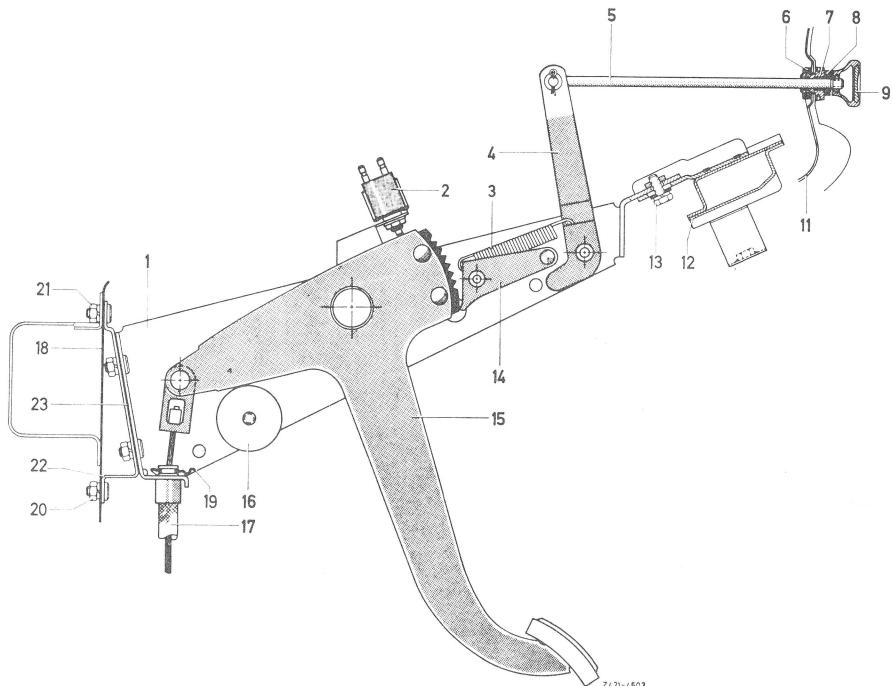


Fig. 3

1 Carrier	8 Stop buffer
2 Switch for warning light	9 Actuating button
3 Restoring spring	11 Instrument panel
4 Release lever	12 Cross member
5 Pull rod	13 Hexagon socket screw with washer and snap ring
6 Nut on rosette	14 Latch
7 Rosette	15 Pedal
	16 Stop buffer
	17 Brake cable control
	18 Front end
	19 Spring clamp

20 Hex. nut and snap ring
21 Hex. nut and snap ring
22 Connecting piece
23 Sealing shim

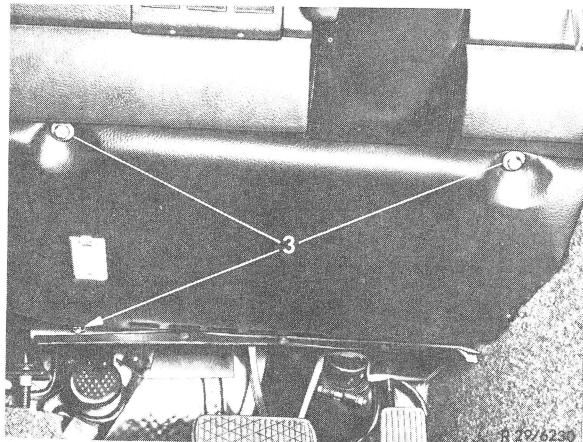


Fig. 4

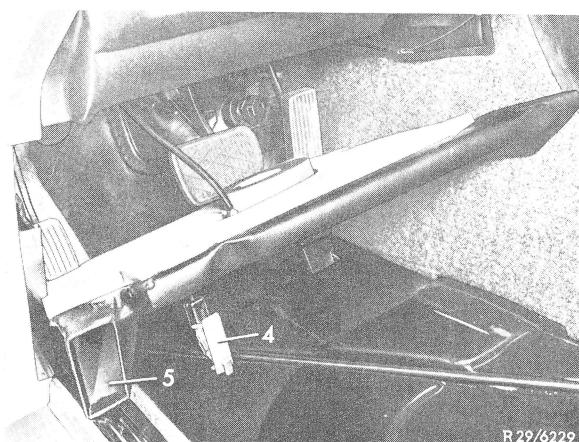
3 Fastening bolts

Fig. 5

4 Legroom light      5 Slot for door ventilation

### Installation

**13** Attach parking brake in lefthand wheel house, on front end and on cross member underneath instrument panel, inserting linkage for manual release into bore of instrument panel (Fig. 3).

**14** Install windshield wiper motor (82.1–610).

**15** Attach brake cable control (17) into pulling plate on pedal and install spring clamp (19) in cable guide (Fig. 3 and 6).

**16** Attach plug connection to switch for warning light. Check warning light for function.

**17** Attach cable assembly with cable belt to parking brake.

**18** Insert stop buffer (8) into groove of pull rod (5) and screw actuating button (9) for manual release to linkage (Fig. 3).

**19** Pull cable for legroom light through cover, attach plug and push legroom light (4) into cover (Fig. 5).

**20** Introduce legroom cover and screw down (Fig. 4).

**21** Attach restoring spring (1) to holder (2) (Fig. 1).

**22** Adjust parking brake (42.1-540).

**23** Install exhaust system (49.1-100).

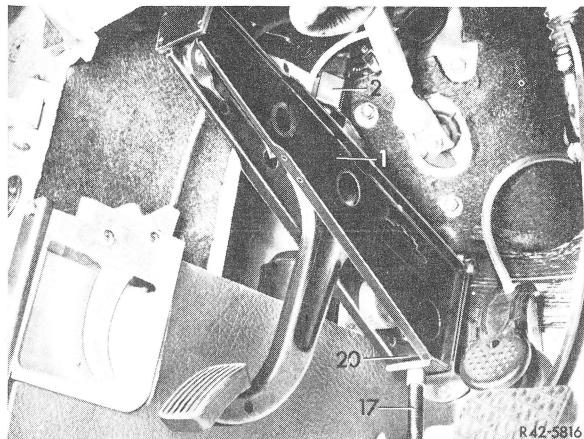


Fig. 6

1 Carrier

2 Holder

17 Brake cable control

20 Spring clip