

General

The horizontally arranged headlight unit includes the following:

High beam in all sealed beam lights and low beam in the outer sealed beam lights.

The turn signal light, and the parking light are installed in a separate unit underneath the bumper. The side marker lights are installed in the side portion of the main headlight unit.

The arrangement of the lights in the tail light assembly is as follows (see Fig. 2):

The Halogen fog lamps are located separately under the bumper.

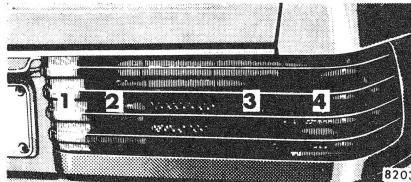
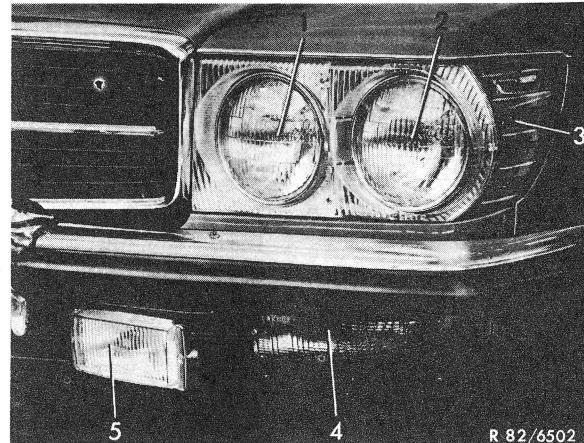


Fig. 2

1 Back up light 3 Parking light/tail light
2 Stop light 4 Turn signal light/

Removal and Installation of Headlights

1 Loosen screws (2) and detach cover (1) (Fig. 3)

2 Unscrew clamping screws (8 or 9) and remove retaining ring and Unit (Fig. 4).

3 Unplug sealed beam unit and remove.

4 For installation reverse above procedure.

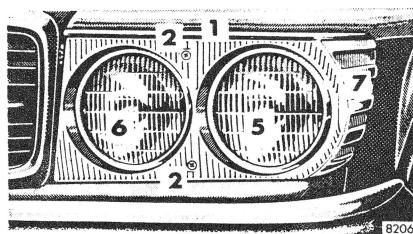


Fig. 3

1 Cover
2 Screw

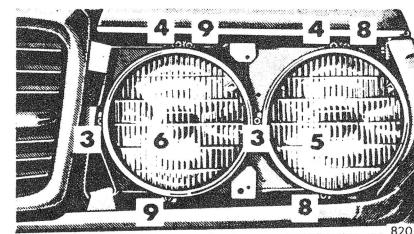


Fig. 4

3 Horizontal aiming screw
4 Vertical aiming screw
5 High and low beam unit (Type 2)
6 High beam unit (Type 1)
7 Clamping screw
8 Clamping screw