


82.1

## **Adjustment of Sealed Beam Unit**

Loosen screws (2) and detach cover (1) (Fig. 1)

Fig. 1

- 1 Cover
- 2 Screw
- 5 High & Low beam unit (type 2)
- 6 High beam unit (type 1)

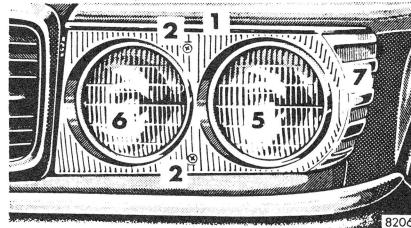

Adjust headlights according to specifications by means of screws (3) and (4).

Fig. 2

- 3 Horizontal aiming screw
- 4 Vertical aiming screw
- 8 Clamping screw
- 9 Clamping screw

