

68.1 Removal and Installation of Trimstrip on Instrument Panel

107

Trimstrip Left and Right

Removal

- 1 Remove instrument cluster at lefthand trimstrip.
- 2 Remove glovebox at righthand trimstrip (68.1–140).
- 3 Pull knob from lever of ring nozzle.
- 4 Pull connecting hose from ring nozzle.
- 5 Unscrew both nuts on lever assembly from inside.
- 6 Remove trimstrip.

Installation

- 7 For installation proceed vice versa.
Make sure that the lever assembly is again screwed back together with trimstrip.

Trimstrip Center

Removal

- 1 Remove instrument cluster (54.1–310).
- 2 Remove glovebox (68.1–140).
- 3 Pull off knob for actuating summer air nozzle.
- 4 Pull duo clips from trimstrip from inside with small screw driver.
- 5 Remove trimstrip.

Installation

- 6 For installation proceed vice versa. Be sure to use new clips.