

Removal

- 1 Pull out glovebox light together with plug and pull off plug socket.
- 2 Remove pin of expanding clamps (Fig. 1).

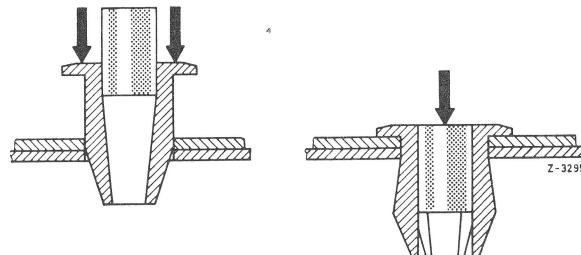


Fig. 1

Installation

- 5 For installation proceed vice versa.

- 3 Remove expanding clamp with plastic wedge.
- 4 Remove glovebox.