

68.1 Removal and Installation of Carpet at Entrance

107

Removal

- 1 Remove seat.
- 2 Remove cover rail on entrance.
- 3 Remove cable cover in legroom.
- 4 Remove carpet in driver's legroom.
- 5 Remove carpet on rear floor.
- 6 Pull out carpet at entrance.

Note: The carpet will be damaged during removal and should always be replaced.

Installation

- 7 For installation proceed vice versa.
For glueing, use glue 2444, Part No. 000 989 92 71.