

Removal

- 1 Remove crank arm (72.1–110).
- 2 Remove rear floor lining.
- 3 Unscrew three philips head screws on lining.
- 4 Move side wall in downward direction out of groove.
- 5 Remove side wall.

Installation

- 6 For installation proceed vice versa.