

## Removal

- 1 Remove rear seat and rear backrest (91.1–170).
  - 2 Remove screws of cover plate (refer to arrows 1 in Fig. 1).
  - 3 Remove cover plate, separating plate from sealing rubber (attached to side wall with clips)
  - 4 Remove screw (2) on side wall.
  - 5 Remove switch for window opener (3).

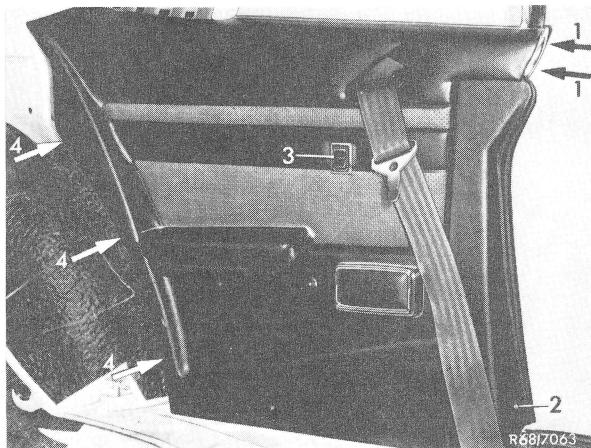


Figure 1

- |                      |                            |
|----------------------|----------------------------|
| 1 Cover plate        | 3 Switch for window opener |
| 2 Screw on side wall | 4 Screws for side wall     |

- 6** Pull off lateral molding strip on shutter in forward direction.

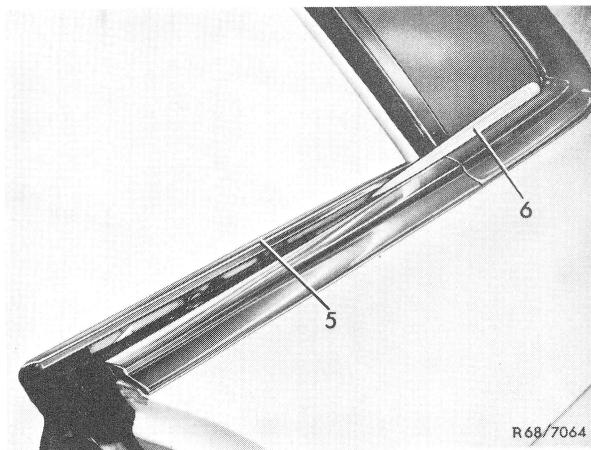


Figure 2

- 5 Side wall top 6 Plastic wedge

- 7 Remove three screws (4) from side wall on wheel housing rear (refer to arrows 4 in Fig. 1).

- 8 Push side wall top (5) out of clips with plastic wedge (6) (Fig. 2).

- 9 Remove screw from safety belt (7) on side member (Fig. 3).

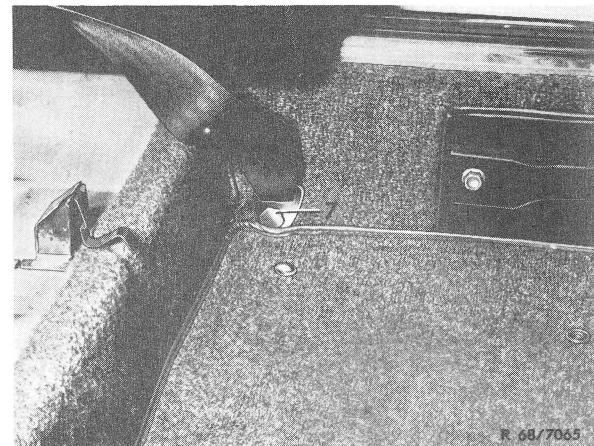


Figure 3

- ## 7 Screw on safety belt

- 10** Pull vacuum hose (8) behind side wall from switch (Fig. 4).

- ## 11 Remove side wall.

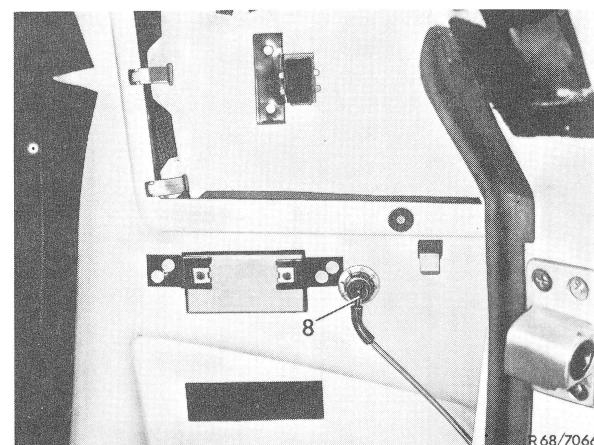


Figure 4

- ## 8 Vacuum hose

## Installation

- 12** For installation proceed vice versa.