

Removal

- 1 Remove coupe top and place turned-around on a suitable work bench.
- 2 Unscrew screws (1) and remove lower trimstrips (2) (Fig. 1).

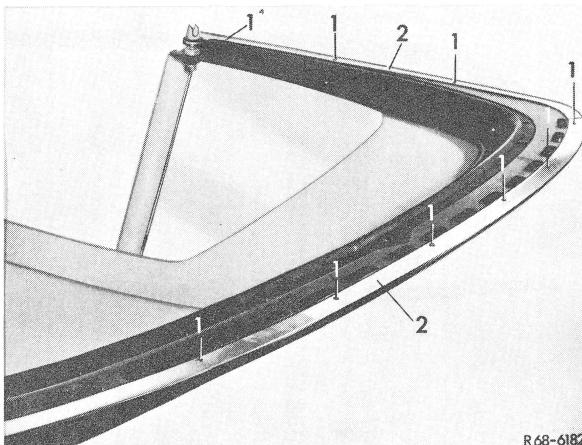


Fig. 1

- 1 Screws on lower trimstrips
2 Lower trimstrips

- 3 Turn coupe top around.
- 4 Push lateral trimstrip (3) out of lower clip with plastic wedge (Fig. 2).
- 5 Pull trimstrip (3) out of remaining clips starting from below and using the plastic wedge (Fig. 3).

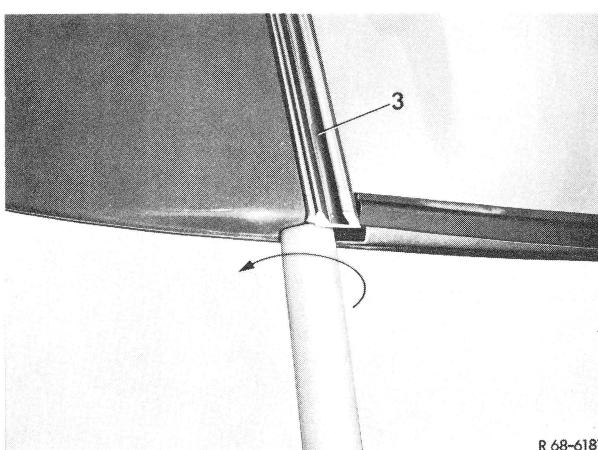


Fig. 2

- 3 Lateral trimstrip

- 6 Lift upper trimstrip (4) and pull trimstrip (3) out of connecting piece in downward direction (Fig. 4). Watch out for plastic support in corner.

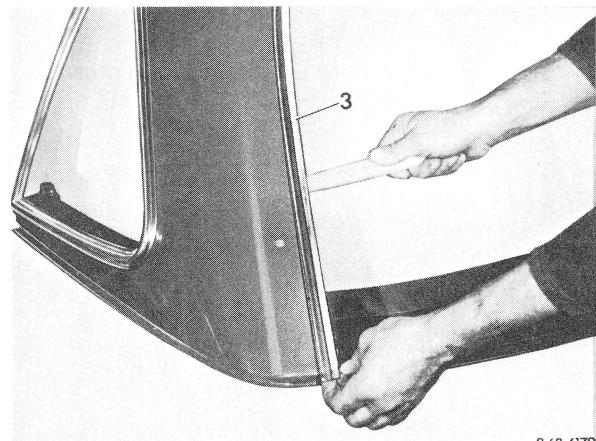


Fig. 3

- 3 Lateral trimstrip



Fig. 4

- 3 Lateral trimstrip 4 Upper trimstrip

- 7 Remove upper trimstrip (4) similar to lateral trimstrip.

Installation

- 8 For installation proceed vice versa.

Note: Make sure that the sealing strip on contact surface of pane is correctly pulled into trimstrip and that the plastic support is installed in upper corners of trimstrips.