

Removal

- 1** Remove rear window.
- 2** Push covers for ornamental frame joint on rear window bottom at left and right sideways.
- 3** Remove ornamental frame at top and laterally from sealing frame.
- 4** Push ornamental frame at bottom out of sealing frame.

Installation

- 5** For installation proceed vice versa.
Push ornamental frame into sealing frame prior to installation of rear window.