


## Removal

- 1 Unscrew sheet metal screw (1) holding compensating tank to partition.
- 2 Remove screws from partition.
- 3 Remove partition.

## Installation

- 4 For installation proceed vice versa.

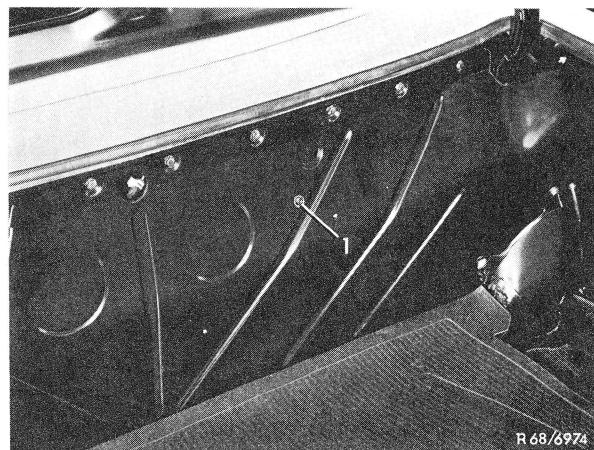

R 68/6974

Figure 1

1 Screw on compensating tank