

**Driver's Door, Front Passenger Door**

Removal and Installation of Door Lining . . . . .	Job No. 72.1-100
Removal and Installation of Window Crank . . . . .	110
Removal and Installation of Inset on Inside Door Actuation . . . . .	120
Removal and Installation of Cover Molding at Lock End . . . . .	130
Removal and Installation of Armrest with Grip . . . . .	140
Removal and Installation of Door Bag . . . . .	150
Removal and Installation of Inside Sealing Strip . . . . .	160
Removal and Installation of Outer Sealing Strip . . . . .	170
Removal and Installation of Window Opener . . . . .	180
Removal and Installation of Crank Window . . . . .	190
Adjustment of Crank Window . . . . .	195
Removal and Installation of Window Guides, Front and Rear . . . . .	200
Removal and Installation of Door Catch . . . . .	210
Removal and Installation of Door Sealing Frame . . . . .	220
Removal and Installation of Inside Door Actuation . . . . .	230
Removal and Installation of Outside Door Handle . . . . .	240
Removal and Installation of Door Lock . . . . .	250
Removal and Installation of Striker Eye . . . . .	260
Removal and Installation of Outside Rear View Mirror . . . . .	270
Trim Strip on Upper Edge of Side Paneling refer to Job No. 68.1-500	