

**Removal**

1 Remove door lining (72.1–100).

2 Remove door sheeting.

**Note:** On electric window opener: loosen connections on cable connector.

3 Remove screws (1) on window lifting rail.

4 Pull up window and clamp with wedge.

5 Remove screws (11) and remove window opener.

**Installation**

6 For installation proceed vice versa.

**Note:** First insert window opener together with crankpin.

7 Then adjust crank window (72.1–195).

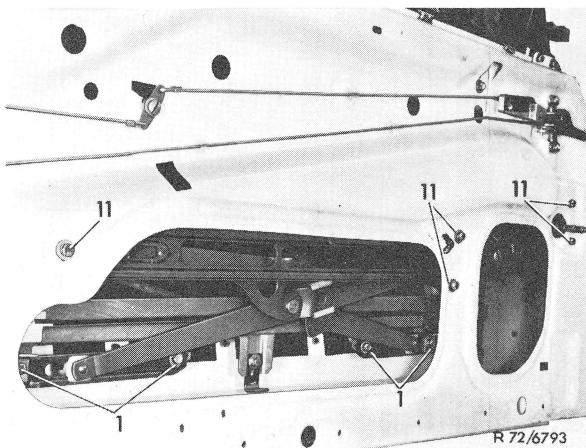


Figure 1

1 Screws on window lifting rail

11 Screws on window opener