

# 72.1 Removal and Installation of Crank Window

107

## Removal

- 1 Remove window guide rear (72.1-200).
- 2 Pull crank window out toward the rear as shown in Fig. 1.

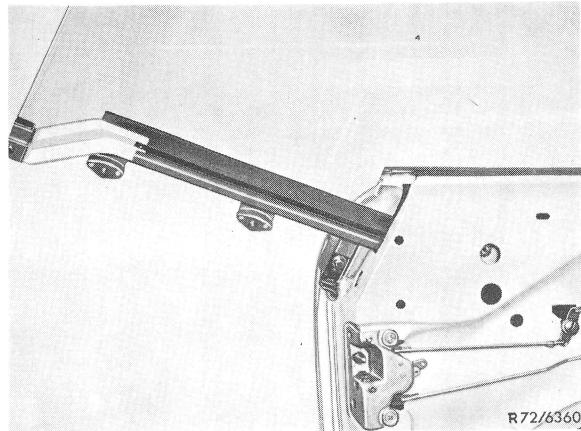


Figure 1

## Installation

- 4 For installation proceed vice versa.
- Adjust crank window prior to installing door lining (72.1-195).

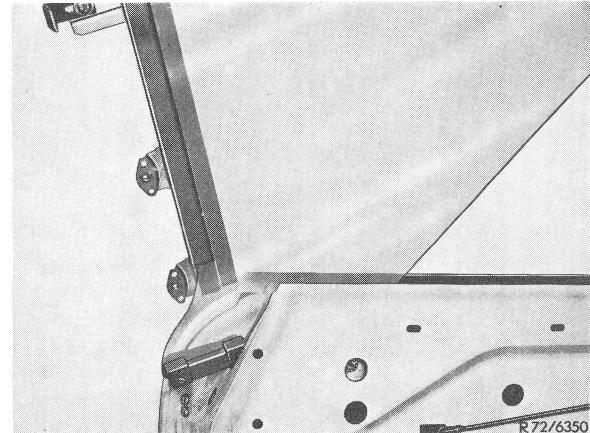


Figure 2