

Removal

- 1 Remove door lining (72.1–100).
- 2 Disconnect pulling and safety linkage.
- 3 Unscrew three screws on inside actuation (3).
- 4 Remove inside actuation (3).

Installation

- 5 For installation proceed vice versa.

Adjustment of Safety Linkage

- 1 Loosen screw (1) on guide lever (2).
- 2 Set inner door safety lock to position (unlocked).

Note: If for reasons of noise a slight pre-tension is required, install safety linkage only with pre-tension in relation to pressure, but not in relation to pull.

- 3 Tighten guide lever (2) in this position.
- 4 Make final check of adjustment, making sure that the door locked with the **inner safety lock** cannot be opened with the **outer door handle**.

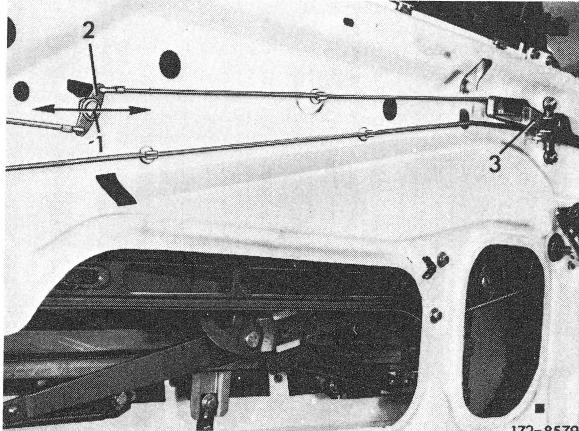


Fig. 1

1 Screw 3 Inside actuation
2 Guide lever