

Revision: Note added.

Note

If outside mirror changes its position by itself, remove mirror, lift rubber cover and tighten clamping screw on adjusting mechanism as required.

Removal

Mirror glass

1 Remove glass from ball socket by means of a plastic wedge and pull out laterally (Fig. 1).

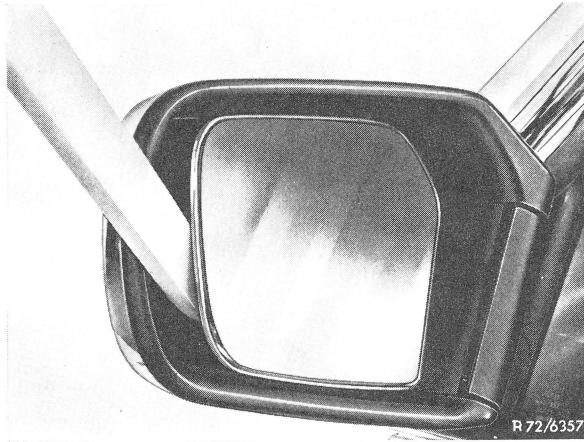


Fig. 1

Complete outside mirror

2 Disconnect door lining at top from clips (Fig. 2).

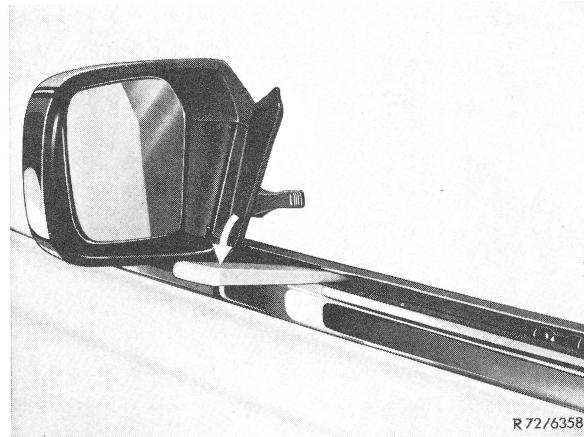


Fig. 2

3 Push lock washer (1) out of handle (2) in direction of arrow.

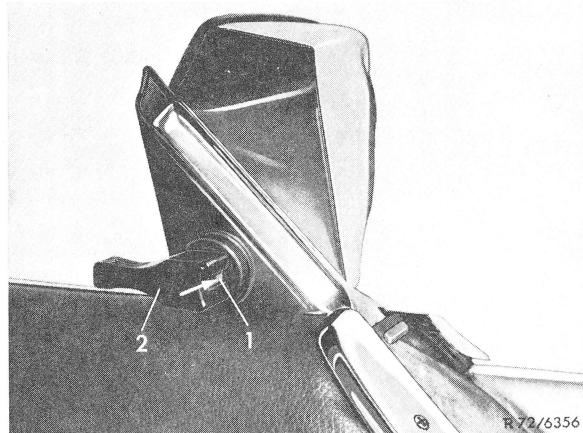


Fig. 3

1 Lock washer 2 Handle

4 Pull off cover plate (3).

5 Unscrew the three screws behind cover plate.

6 Remove mirror (5) with intermediate shim (4) from guide holder (6).

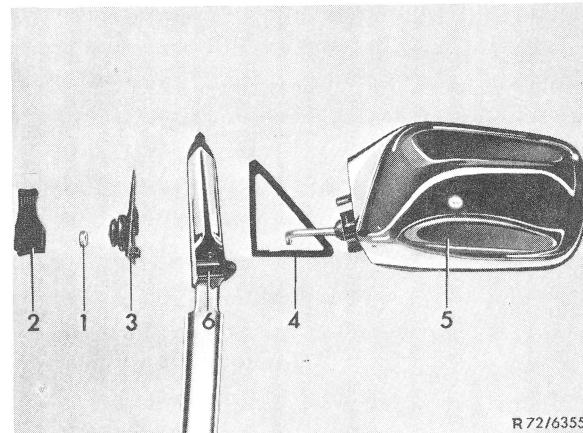


Fig. 4

1 Lock washer 4 Intermediate shim
2 Handle 5 Outside mirror
3 Cover plate 6 Guide holder

Installation

6 For installation proceed vice versa.

