

Removal

- 1 Remove trunk lid (75.1–100).
- 2 Remove torsion bars (75.1–130 or 135).
- 3 Unbend locking tooth hex. screw on bearing bolt.
- 4 Knock out bearing bolt slightly with plastic hammer and pull off with pliers.

Installation

- 5 For installation proceed vice versa.