

**Removal**

- 1** When cover is used again, identify location of hinge lever in relation to cover.
- 2** Remove screws from hinge levers.
- 3** Remove top well lid.

**Installation**

- 4** For installation proceed vice versa.

Adjust **stop** screw in such a manner that the cover can be closed under moderate pressure and is in alignment with the adjacent body members.

