

Removal

1 Unscrew both oval head screws (57) on tank filler neck (Fig. 1).


 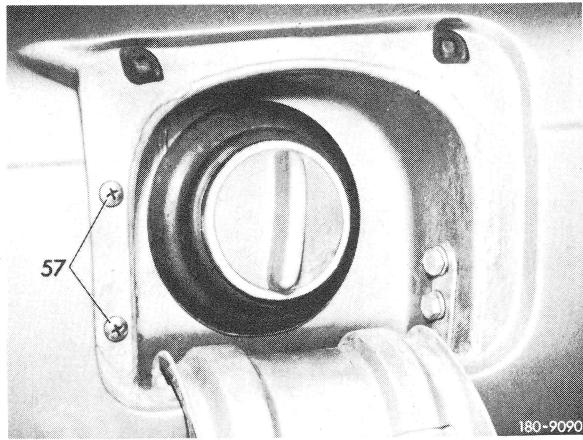


Fig. 1

57 Oval head screws

2 Unscrew hex. screw (58) from bracket (62) (Fig. 2).



4 Remove bracket (62).

5 Pull connection (17) with interlocking line „white“ (25) from vacuum element (4) (Fig. 3).

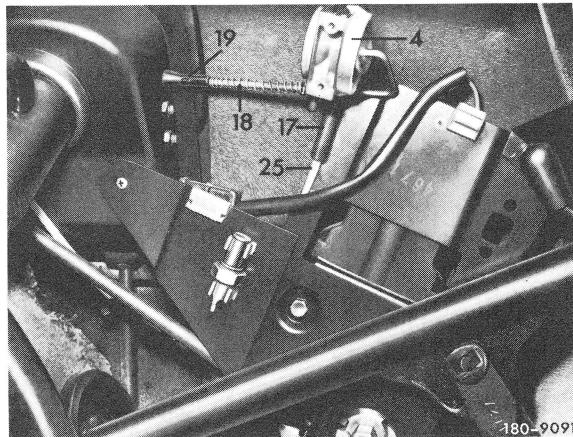


Fig. 3

4 Vacuum element
17 Connection
18 Compression spring19 Sleeve
25 Interlocking line „white“

6 Pull vacuum element (4) with compression spring (18) out of sleeve (19) (Fig. 3).

Installation

7 Introduce vacuum element (4) with compression spring (18) into sleeve (19) (Fig. 3).

8 Slip connection (17) with interlocking line „white“ (25) on vacuum element (4) (Fig. 3).

9 Screw bracket (62) with oval head screws (30) to vacuum element (Fig. 2).

10 Screw bracket (62) with hex. screw (58) to mounting (Fig. 2).

11 Screw both oval head screws (57) to tank filler neck (Fig. 1).

Fig. 2

30 Oval head screws 62 Bracket
58 Hex. screw