

## Removal

- 1 Pull door contact-vacuum switch (44) from hinge column.
- 2 Pull-off connection (17) with blue vacuum line (Fig. 1).

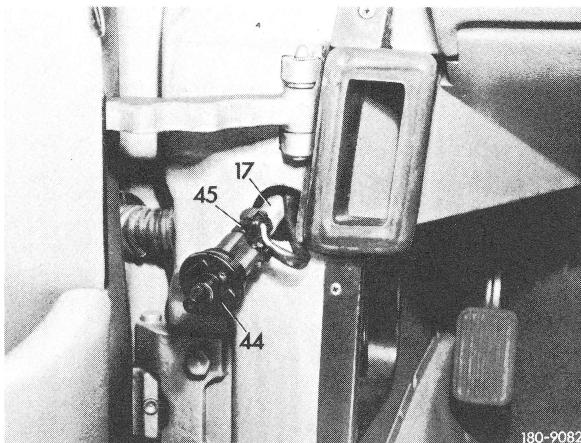


Fig. 1

17 Connection                                    45 Coupling  
44 Door contact-vacuum switch

- 3 Pull coupling (45) from door contact-vacuum switch (44) (Fig. 1).

## Installation

- 4 Attach coupling (45) to door contact-vacuum switch (44) (Fig. 1).
- 5 Slip-on connection (17) with blue vacuum line (Fig. 1).
- 6 Push door contact-vacuum switch (44) into hinge column.