

**Removal**

- 1 Remove rear seat cushions (body 91.1–170).
- 2 Remove side wall in rear compartment (body 68.1–456).
- 3 Pull connection (17) with blue vacuum line from vacuum switch (46) (Fig. 1).

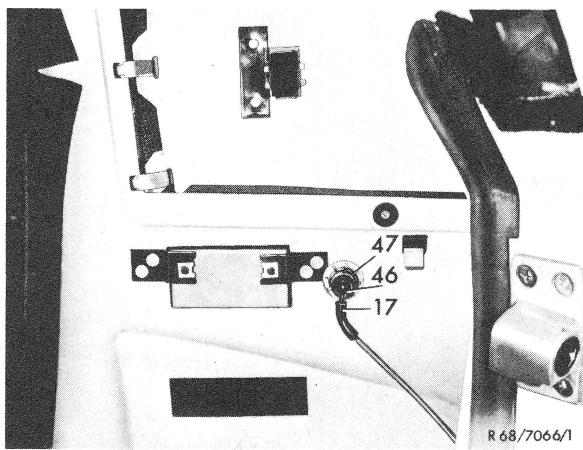


Fig. 1

17 Connection  
46 Vacuum switch

47 Clamping spring

**Installation**

- 6 Insert vacuum switch into side wall.
- 7 Attach clamping spring (47) to vacuum switch (46) (Fig. 1).
- 8 Slip-on connection (17) with blue vacuum line (Fig. 1).
- 9 Install side wall in rear compartment (body 68.1–456).
- 10 Install rear seat cushions (body 91.1–170).