

Data

Speed	3,300 rpm
Voltage	12 V
Input	approx. 100 Watts

Removal

- 1 Disconnect battery.
- 2 Pull double coupling on reinforcement (24) front right in engine compartment from clamp (22) and loosen plug connection (Fig. 1).

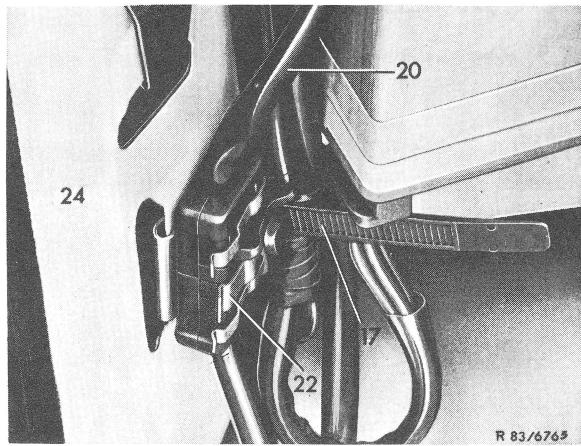


Figure 1
Layout of plug connection for supplementary fan on reinforcement front right

17 Cable band 22 Clamp
20 Line assembly 24 Reinforcement front

- 3 Expose line assembly (20) up to supplementary fan (4) while opening cable band (17) (Fig. 1 and 2).
- 4 Unscrew both fastening clips (14) at left and right on supplementary fan and remove supplementary fan.

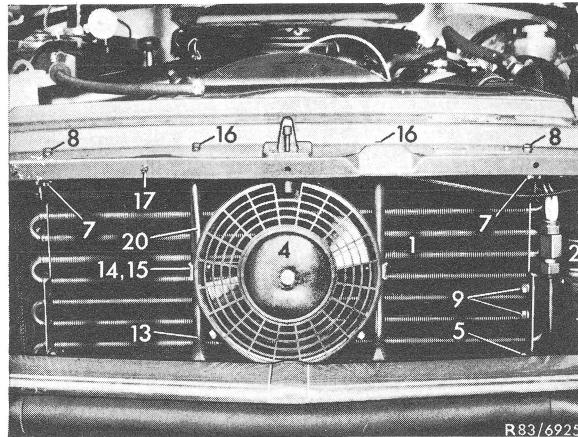


Figure 2 Layout of supplementary fan

- 1 Condenser
- 2 Receiver
- 4 Supplementary fan
- 5 Sheet metal screw with washer
- 7 Hex. screw with nut, washer and lock washer
- 8 Hex. screw with washer, lock washer and hex. nut
- 9 Hex. nut with lock washer
- 13 Strut
- 14 Fastening clip
- 15 Combination screw
- 16 Hex. screw with washer, lock washer and hex. nut
- 17 Cable band

Installation

- 5** Screw supplementary fan with two fastening clips (14) and combination screws (15) to struts (13).
- 6** Attach line assembly with cable band (17) to right-hand strut (13) and to reinforcement front.
- 7** Connect double plug of supplementary fan with double coupling of line assembly and mount with clamp (22) as shown in Fig. 1.
- 8** Check supplementary fan for performance by shorting the two flat plugs on temperature switch (3). Observe direction of rotation of fan.