

Headrest

Adjustment of Friction Torque on Headrest	91.1-050
---	----------

Driver's Seat

Removal and Installation of Driver's Seat	100
Removal and Installation of Front Passenger Seat	110
Removal and Installation of Seat Rail and Seat Fitting	120
Bearing Bolt on Driver's Cushion Frame, Driver's Backrest	140
Removal and Installation of Rear Seat and Rear Seat Backrest (Coupe)	170

Occasional Seat

Removal and Installation of Occasional Seat with Backrest at Rear	200
---	-----