

**Removal**

- 1 Slide seat completely forward.
- 2 Loosen safety belt on outer end of seat.
- 3 Remove carpet behind driver's seat.
- 4 Remove screw (1) on both sides on connecting plate (2), as well as screw (3) on seat height adjustment (4).
- 5 Slide seat completely back.
- 6 Remove screws on both sides on seat guide rails front.
- 7 Remove driver's seat.

**Installation**

- 8 For installation proceed vice versa.

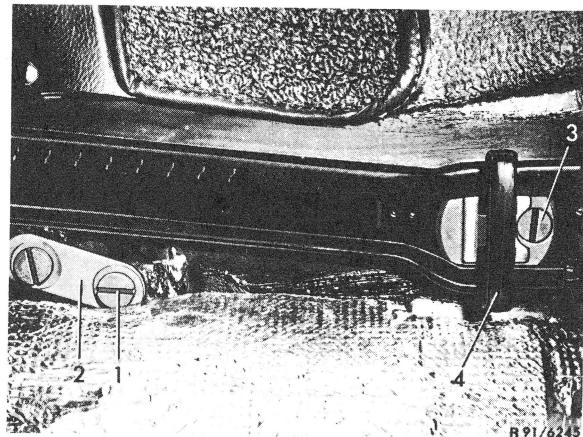


Fig. 1

- 1 Screw on connecting plate
- 2 Connecting plate
- 3 Screw on seat height adjustment
- 4 Seat height adjustment