

Seat Rail with Height Adjustment

- 1 Remove driver's seat (91.1-100).
- 2 Pull up lock and remove seat rails toward rear.

Seat Fittings

- 1 Remove driver's seat (91.1-100).
- 2 Remove cap from hand wheel.

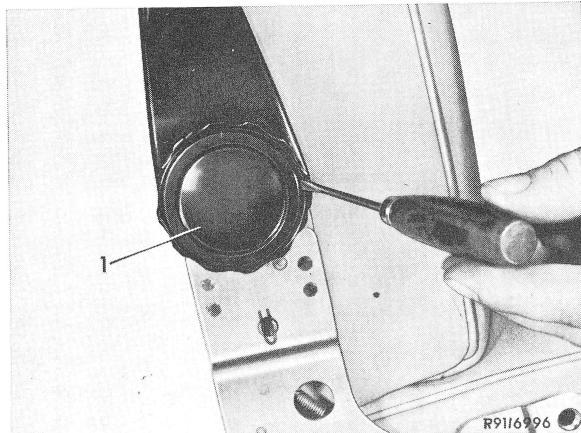


Fig. 1

1 Cap on hand wheel

- 3 Turn spring washer (2) with screw driver toward the left and remove hand wheel.

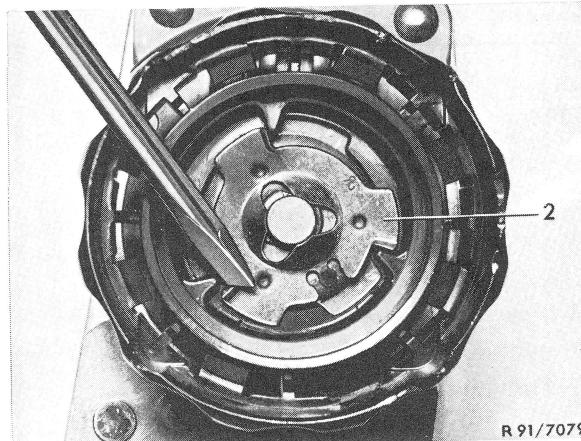


Fig. 2

2 Spring plate

- 4 Remove cover molding top.
- 5 Unscrew Phillips head screws (2 each) on seat fittings.
- 6 Lift seat fittings and disconnect Bowden wire.

Prior to assembly of seat fittings, adjust Bowden wire in such a manner that lever of backrest lock completely releases locking lever upon actuation.

Caution! The two Phillips head screws on seat fittings are coated with locking paint, so that an impact screw driver should be used for loosening these screws.