

107.04

Removal

- 1** Lift occasional seat cushion at front and remove.
- 2** Lift cover plates of backrest attachment.
- 3** Remove two screws on each side.
- 4** Remove holding strap at top on backrest.
- 5** Remove backrest in upward direction.

Installation

- 6** For installation proceed vice versa.