

Removal

- 1 Force regulating rod together with damping ring from lever of regulating shaft.

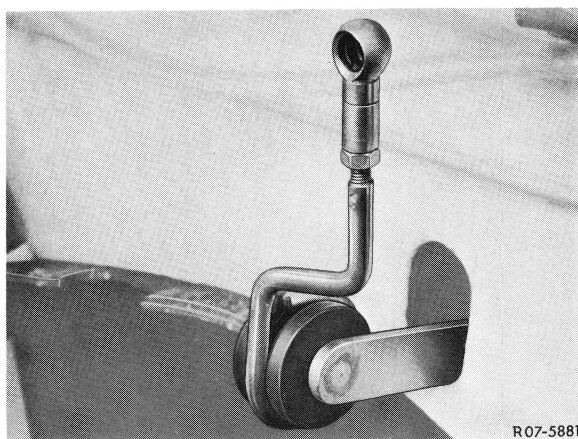


Fig. 1

- 2 Remove accelerator pedal (07.4.0—445).
- 3 Remove heater box (83.1—100).
- 4 Disconnect restoring spring and screw hexagon sheet metal bolts from plastic bearings.

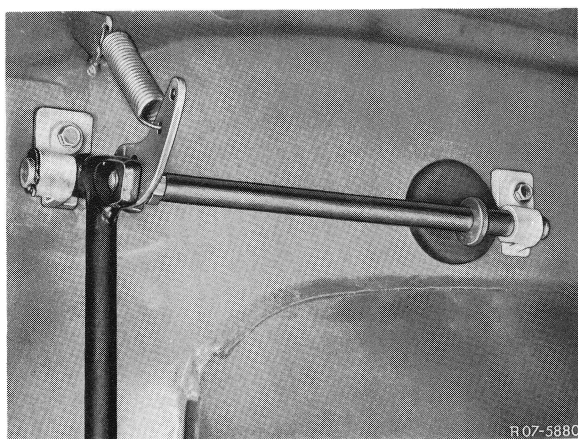


Fig. 2

- 5 Push plastic bearing out in upward direction and remove regulating shaft together with bearing.

Installation

For installation proceed vice versa, while attaching the restoring spring to the inner hole.

Adjustment

- 6 Step on accelerator pedal of vehicles with manual transmission up to full throttle stop, on vehicles with automatic transmission up to kickdown. The regulating lever should rest against the full throttle stop of the valve connection.

Loosen hex. bolt (arrow), if required, push regulating linkage up to full throttle stop on valve connection and tighten hex. bolt again.

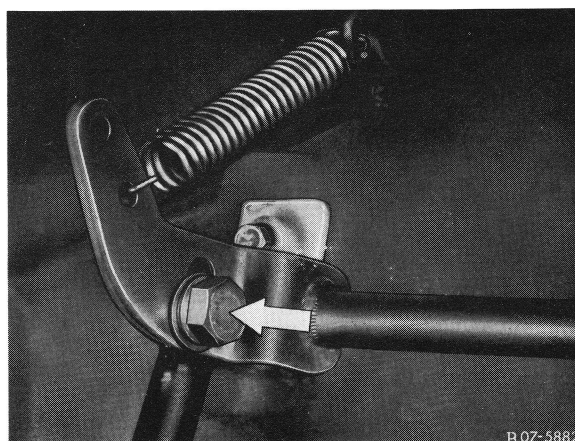


Fig. 3