

# 07.4.1 Removal and Installation of Longitudinal Regulating Shaft

---

M 116, M 117

## Removal

---

- 1 Loosen hex. bolt (arrow) and remove safety clip.

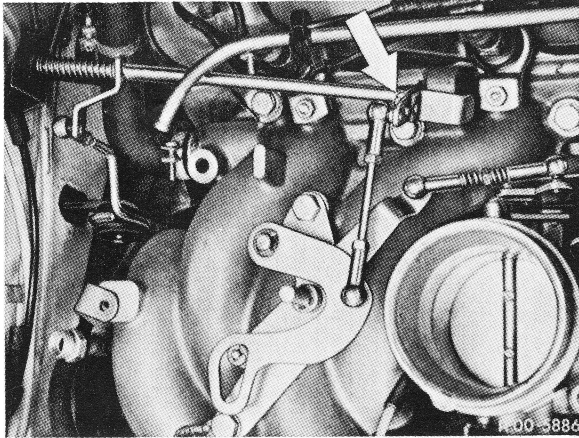


Fig. 1

- 2 Disconnect connecting rod and push rod, push longitudinal regulating shaft toward the rear and remove. Watch out for compression spring, plastic bushings and joint balls.

## Installation

---

For installation proceed vice versa. Coat bearing points as well as ball sockets of regulator with molykote longterm.2.

Adjust regulating linkage (07.4.1—443).