

Removal

- 1 Pull off electrical connection for temperature feeler.
- 2 Disconnect two rubber gaskets (arrows in Fig. 1).

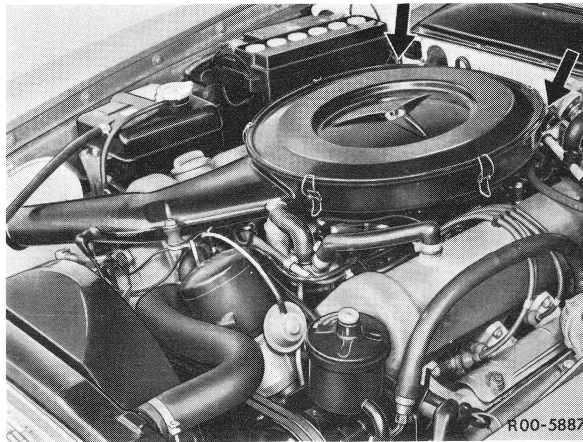


Fig. 1

- 3 Unscrew fastening nut on anti-vibration buffer.
- 4 Lift off air cleaner, while pulling profile hose from crankcase breather.

Installation

- 5 Install air cleaner in vice versa sequence. Watch out for correct seat of sealing ring between valve connection and air cleaner.

Cleaning the Filter Element

- 1 Loosen clamp and ring nut on filter cover and remove filter element.
- 2 Blow out filter element with compressed air (of max. 5 atü) from inside out (Fig. 2).

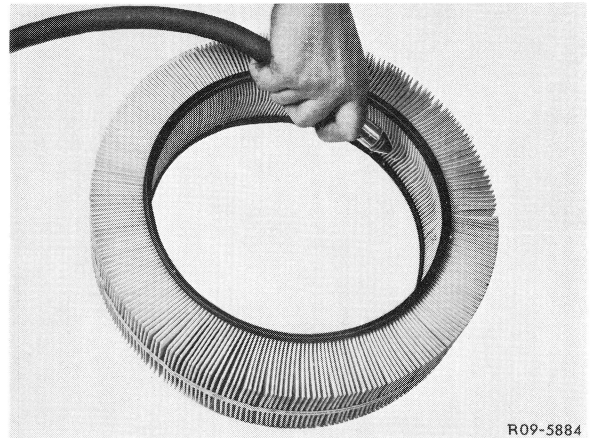


Fig. 2

- 3 Blow dirt from outer jacket of element by holding air gun at an angle (Fig. 3).

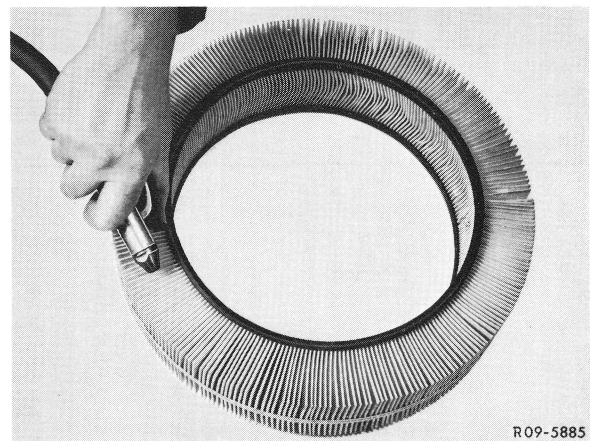


Fig. 3

- 4 Clean cover with housing bottom by means of a rag soaked in gasoline.

Caution! Do not use cotton waste.

- 5 Install filter element and mount filter cover.