

Filling Capacities in Liters

Full Tank Reading	approx. 90
Warning Lamp Reserve	11–13

Tightening Torques in kpm

Fastening Bolts for Fuel Tank	2.0
Closing Plug	0.8–0.9

Special Tool

Matra Clamp W 157	—
-------------------	---

Note

Observe **safety rules** when removing fuel tank.

Removal

1 Disconnect fuel suction hose with a Matra clamp. Release suction hose on fuel pump (arrow in Fig. 1) and drain fuel.

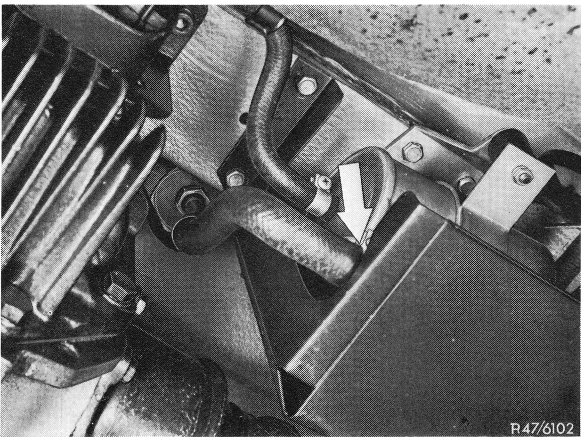


Fig. 1

2 Unscrew suction hose on fuel tank (Fig. 1), loosen return hose and remove (arrow in Fig. 2).

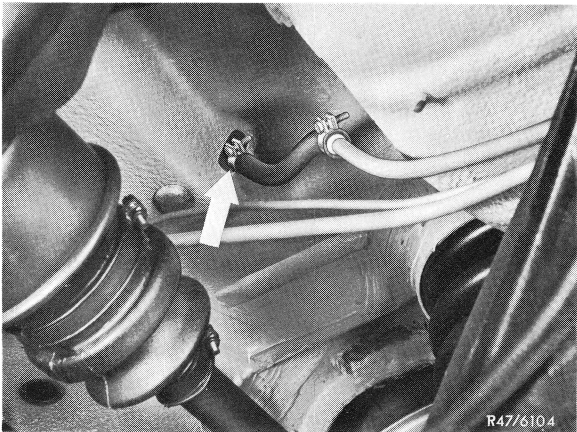


Fig. 2

3 Remove rubber mat and vehicle jack from trunk.

4 Unscrew rear wall and remove (Fig. 3).

47.1 Removal and Installation of Fuel Tank

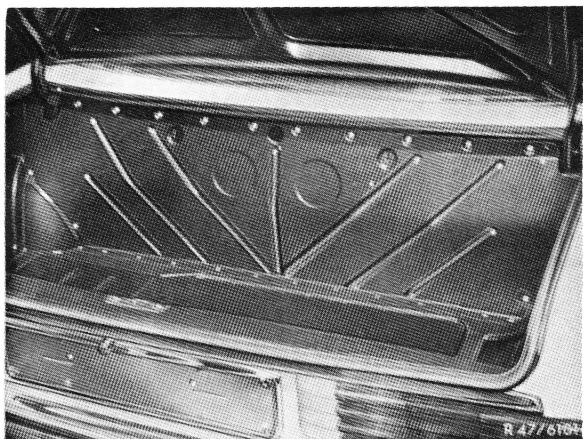


Fig. 3

5 Loosen fuel hoses for compensating tank on fuel tank.

6 Unscrew fastening bolts on fuel tank (Fig. 4).

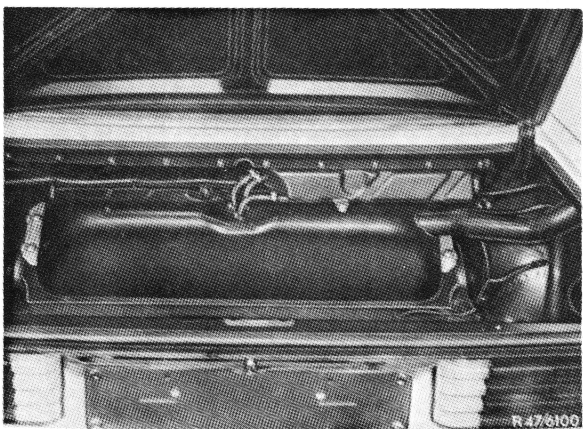


Fig. 4

7 Remove fuel tank, while pulling cable plug connection from immersion tube indicator.

Installation

8 Install fuel tank in vice versa sequence.

Observe the following points:

- a) Check whether the foam rubber strips on the fuel tank are tight; glue down, if required.
- b) Mount fuel tank with reinforcing plates and washers provided.
- c) Watch out for correct seat of rubber sleeve on filler neck.
- d) Prior to sliding the fuel tank completely into tank holder, insert cable plug connection of immersion tube indicator.