

### Removal

- 1 Removal hard top, open top lock and remove top.
- 2 Unscrew both fastening screws (arrow in Fig. 1).

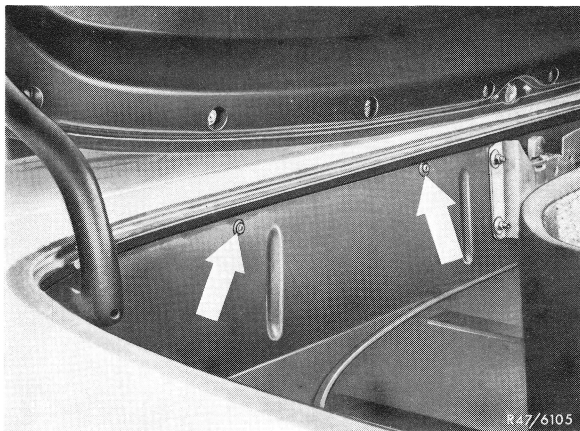


Fig. 1

- 3 Remove rubber mat and vehicle jack from trunk.
- 4 Unscrew rear wall and remove.
- 5 Loosen fuel hoses on compensating tank.

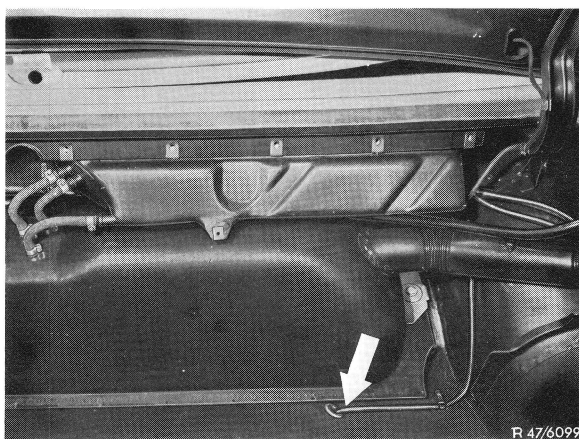


Fig. 2

- 6 Remove rubber sleeve on fresh air inlet and outlet line (arrow in Fig. 3).

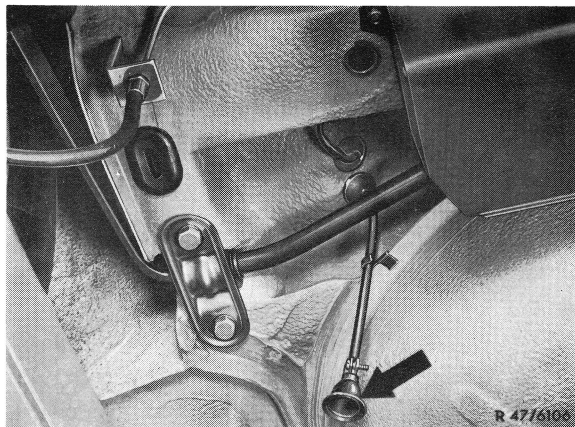


Fig. 3

- 7 Remove compensating tank by pulling out fresh air inlet and outlet line (arrow in Fig. 2).

### Installation

- 8 For installation proceed vice versa. Make sure that the fresh air inlet and outlet line is laid behind fuel tank filler neck first.

When **tightening hose clips, apply counter hold to connections of compensating tank.**