
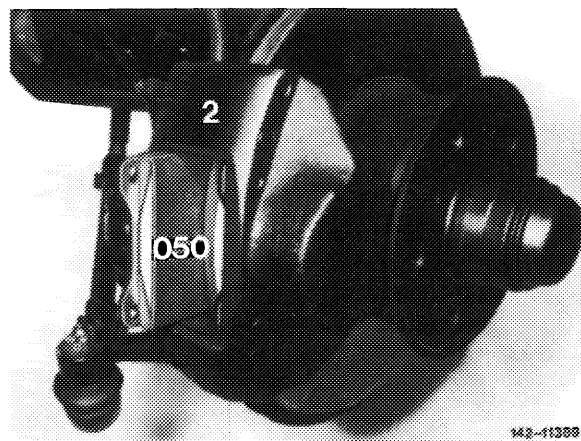


**Special tools**

Cleaning pads (4 each), 77 mm wide, for brake disc of front axle		115 589 00 28 00
Cleaning pads (4 each), 90 mm wide, for brake discs of front axle		116 589 00 28 00
Cleaning pads (4 each) for brake discs of rear axle		115 589 01 28 00

- 1 Remove brake pads (42–160).
- 2 Install cleaning pads (050).
- 3 Clean brake discs of front axle. **Cleaning pads installed on front wheel brake only.**
  - a) Drive pertinent wheel with a suitable drive unit (e.g. Finish-Balancer made by Hoffmann) and press cleaning pads several times against disc under slight foot pressure against brake pedal.
  - b) Drive vehicle at a speed of approx. 30 km/h for a distance of 300 m while pressing the cleaning pads against the brake disc under slight foot pressure of approx. 50 N (5 kp) against brake pedal.
- 4 Clean brake discs of rear axle. **Cleaning pads are installed on rear wheel brake only.** Drive vehicle at a speed of approx. 30 km/h for a distance of 300 m while pressing the cleaning pads several times against the brake discs under a slight foot pressure of approx. 50 N (5 kp) against brake pedal.



**Attention!**

**Do not operate brake in jerks, since this may tear the emery cloth from the cleaning pads.**

With the vehicle jacked up, do not drive rear wheels by means of engine or any other drive unit.

Due to the low speed and the resulting insufficient cleaning action, drum dynamometers and brake test benches are **not** suitable for cleaning brake discs.

5 Remove cleaning pads.

6 Install brake shoes (42–160).