


Removal

1 Disconnect restoring spring (4) on compensating lever (5) and screw back adjusting screw (8) on adjusting bracket (7).

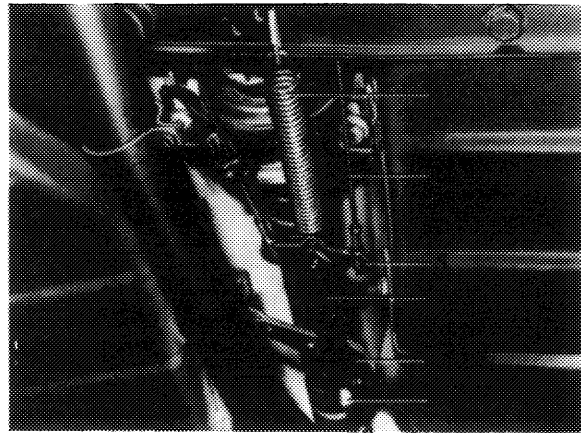


2 Turn steering completely to the left and unscrew both hex. nuts (19) in lefthand wheel house.

3 Remove cover under instrument panel.

4 Unscrew actuating knob (9) for manual release and remove locking ring (10).

- 1 Carrier
- 2 Switch for warning light
- 3 Restoring spring
- 4 Releasing lever
- 5 Pull rod
- 6 Nut on rosette
- 7 Rosette
- 8 Stop washer
- 9 Actuating knob
- 10 Locking ring
- 11 Instrument panel
- 12 Cross member
- 13 Hex. screw with washer
- 14 Detent
- 15 Pedal
- 16 Stop buffer
- 17 Brake cable control
- 18 Front end
- 19 Hex. nut with washer and snap ring

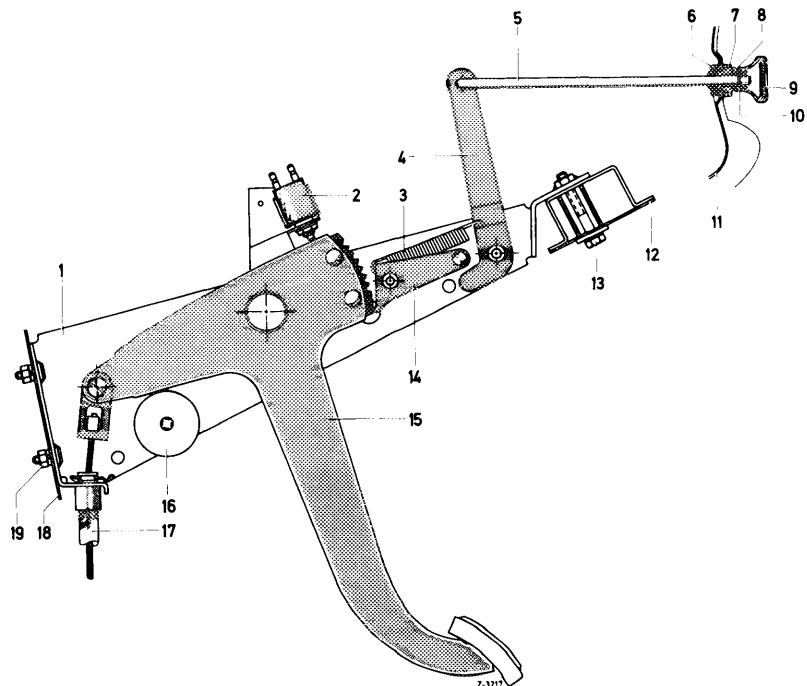


5 Disconnect brake cable control (17) from pedal link (15) Remove spring clip, then brake cable control.

6 Unscrew hex. screw (13) from carrier (1) and remove complete pedal assembly.

7 Remove flasher transmitter (22) and plug connection (21) from carrier of pedal assembly.

8 Loosen plug connection (23) on switch for parking brake warning light.

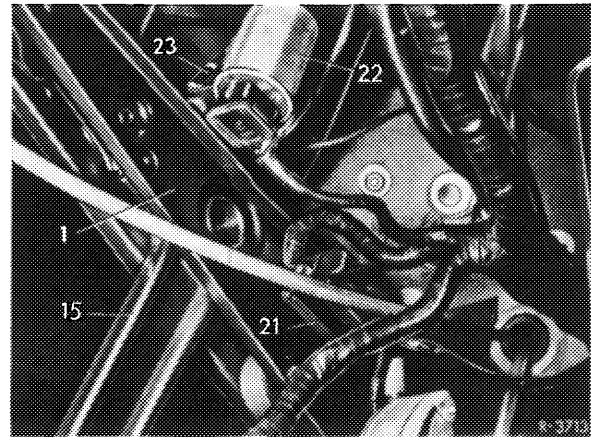

Installation

9 Attach pedal assembly to lefthand wheel house and to cross member under instrument panel, while entering linkage for manual release into bore of instrument panel.

10 Attach brake cable control (17) into pulling link of pedal and insert spring clip into cable guide.

11 Insert locking ring (10) into groove of pull rod (5) and screw actuating knob (9) for manual release on linkage.

12 Mount plug connection on switch for warning light. Check warning light for function.

13 Attach flasher transmitter (22) and plug connection (21) to carrier.

14 Insert lower cover.

15 Attach restoring spring (15) on compensating lever (5).

16 Adjust parking brake (42–540).

