


54-305 Removal and installation of rotary light switch

Removal


1 Disconnect battery negative terminal.

2 Pull off knob (1) (mounted conically).

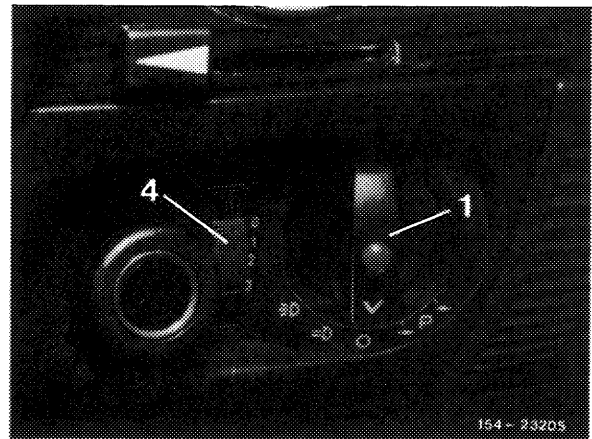

3 Unscrew nut (2) and remove cover with symbol (3).


4 Remove cover under instrument panel left (68-150).

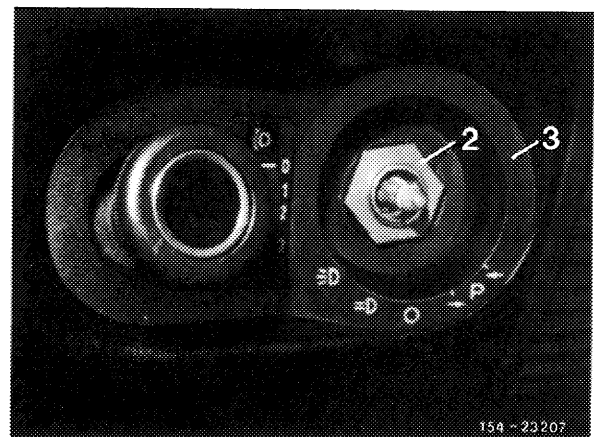


5 Remove rotary light switch from instrument panel in downward direction.

Installation

6 For installation proceed vice versa. Make sure that rotary light switch engages in recess (5).

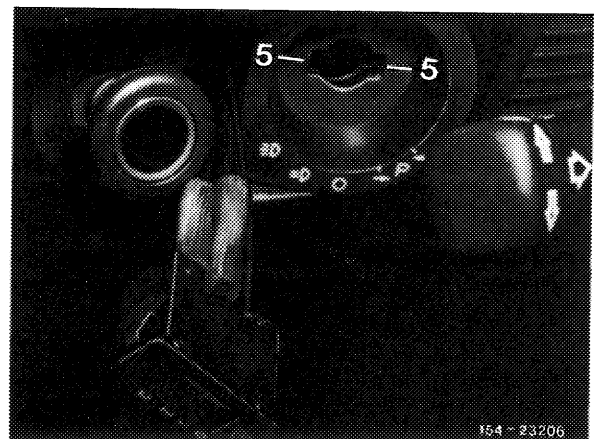

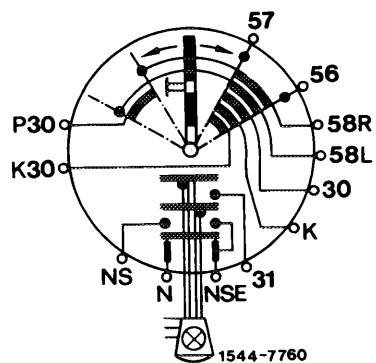

Connection diagram rotary light switch

Terminal	Designation	Line cross section	Cable color
30	Battery plus	6	red
K 30	Licence plate lamp input	0.75	grey/red
P 30	Standing lamp input	0.75	green/white
31	Ground for rear fog lamp	1.5	brown
56	Driving lamp	2.5	white/yellow
57	—	—	—
58 L	Parking-, tail lamp left	2.5	grey/white
58 R	Parking-, tail lamp right	1.5	grey
NSE	Rear fog and fog lamp input	1.5	grey/yellow/green
NS	Rear fog lamp output	1.5	grey/green
N	Fog lamp output	1.5	grey/green
K	Instrument lamps input	0.5	grey/purple
	Licence plate lamps	0.75	grey/purple
	Switch lamps	0.75	grey/blue